DISASSEMBLY

■ Screw Information

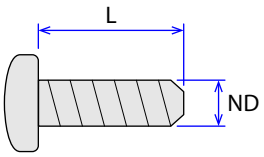

ND: Nominal diameter
L: Length

No.	Photo	Size (mm)		Color	Screw Type		Code No.
		ND	L		Head Section	Screw Section	
S1		4	10	Black	Bind	Tapping type B	10220330
S2		3.8	10	Silver	Bind	Tapping type B	10517163
S3		2.6	8	Silver	Bind	Tapping type B	10193631
S4		2.6	18	Silver	Pan	Machine	10193632

■ Flowchart

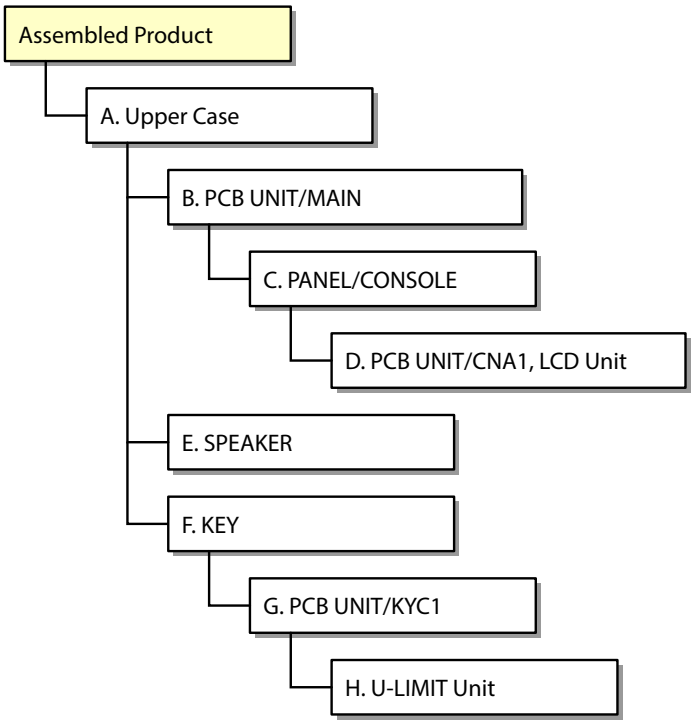

A. Removing the Upper Case

A-1. Remove the followings:

- Music stand, AC adaptor, battery

A-2. Undo S3 screws (x19) on the bottom surface.

No.	Photo	Size (mm)		Color	Q'ty
		ND	L		
S1		4	10	Black	19

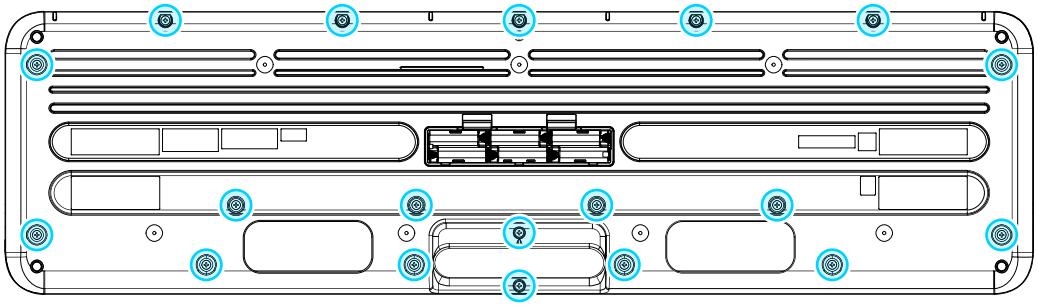

○ : S1

Notes on assembly

- Tighten the screws in the sequence shown in the figure below.

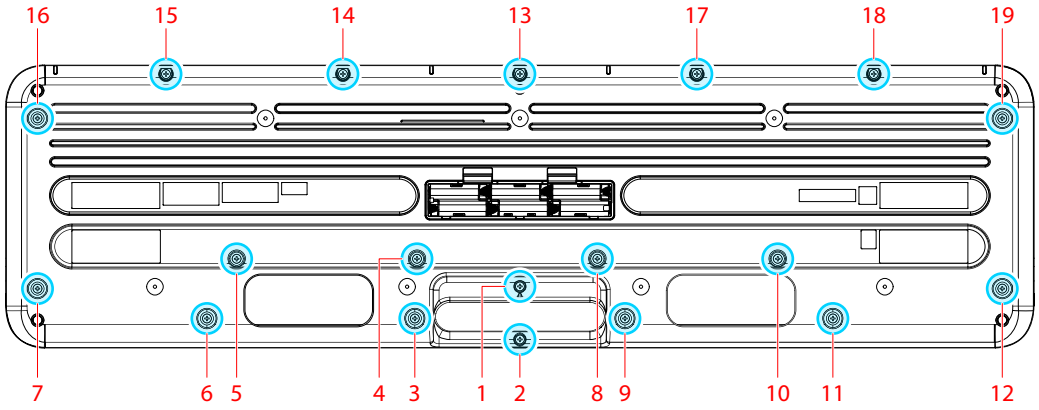

○ : S1

- When assembling the battery spring, be sure to press in the spring fully until it is caught by the protrusion of the case. After assembling, check that the spring remains intact without deformation.

A-3. Place the main unit with the keyboard facing up and open the case.

The upper case and lower case are not secured at this point. Hold the cases with your hands when turning over the piano.

The upper case and lower case are connected with cables. Use caution so as not to apply too much tension to the cables when removing the upper case.

When you remove the upper case, take care not to damage the keyboard.

Notes on assembly

- Be sure that cables are not caught between the cases.

A-4. Disconnect the following cables from the MDA1 PCB to remove the upper case.

When you move the upper case, do not hold the front section.

No.	Cable		Connected From
CN4	FFC	18-pin, lower contact, w/ lock	KYC1 PCB
CN7	Harness	2-pin	Battery terminals

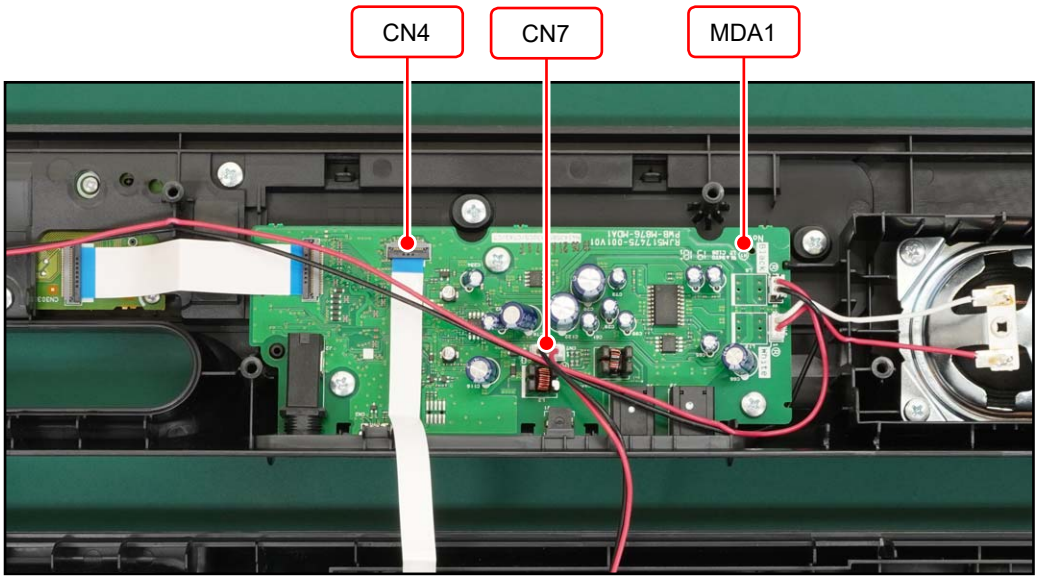

B. Removing PCB UNIT/MAIN

B-1. Remove the following part.

- Upper case (P2)

B-2. Disconnect the following cables.

Remove the speaker cable from the rib of the lower case as necessary.

No.	Cable		Connected From
CN1	FFC	30-pin, lower contact, w/ lock	CNA1 PCB
CN9	Harness	2-pin	Left speaker
CN10	Harness	2-pin	Right speaker

B-3. Undo S2 screws (x3) and remove PCB UNIT/MAIN.

No.	Photo	Size (mm)		Color	Q'ty
		ND	L		
S2		3.8	10	Silver	3

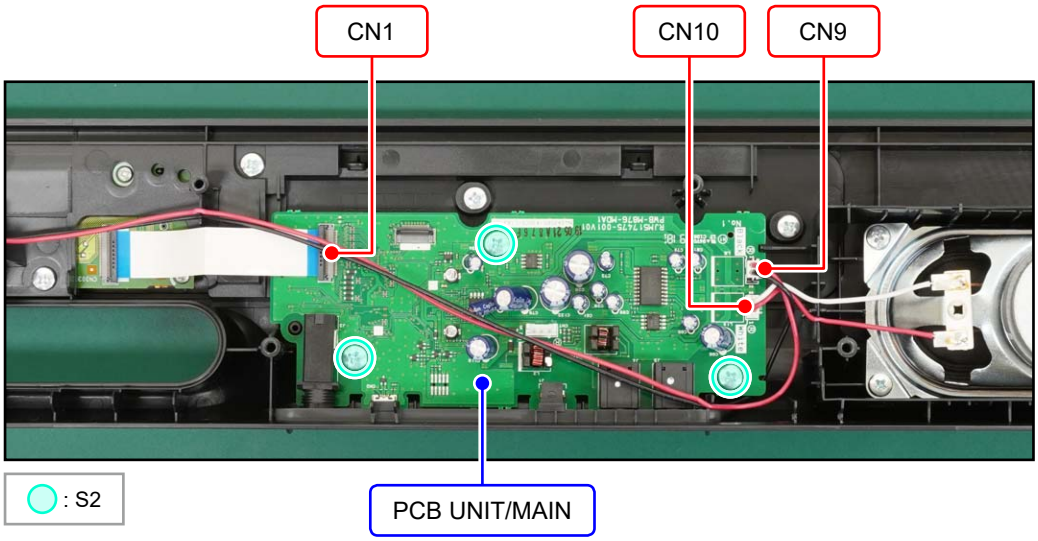

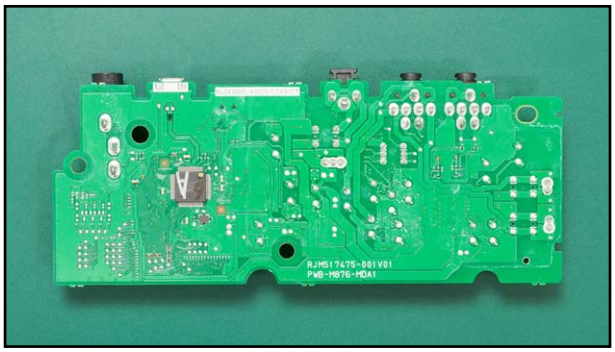

C. Removing the Console Unit

C-1. Remove the following parts.

- Upper case (P2)
- PCB UNIT/MAIN (P4)

C-2. Undo S2 screws (x10).

No.	Photo	Size (mm)		Color	Q'ty
		ND	L		
S2		3.8	10	Silver	10

C-3. Unhook and remove the Upper Case from the Console Unit.

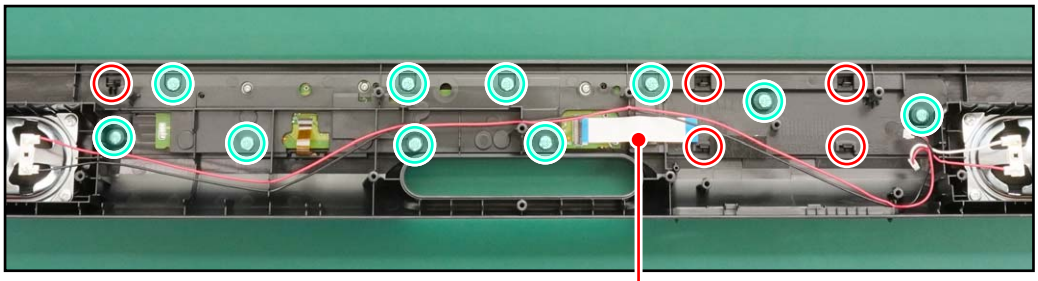

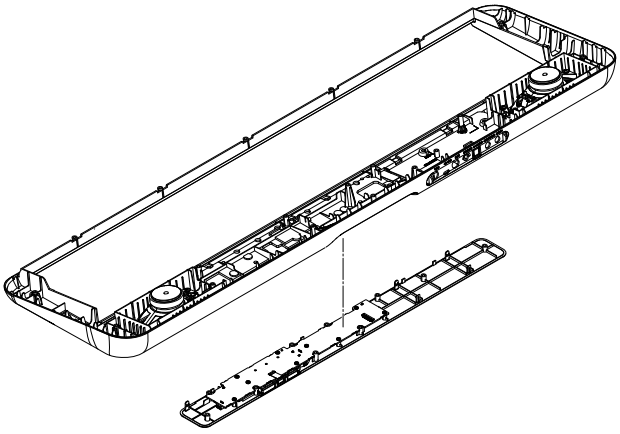

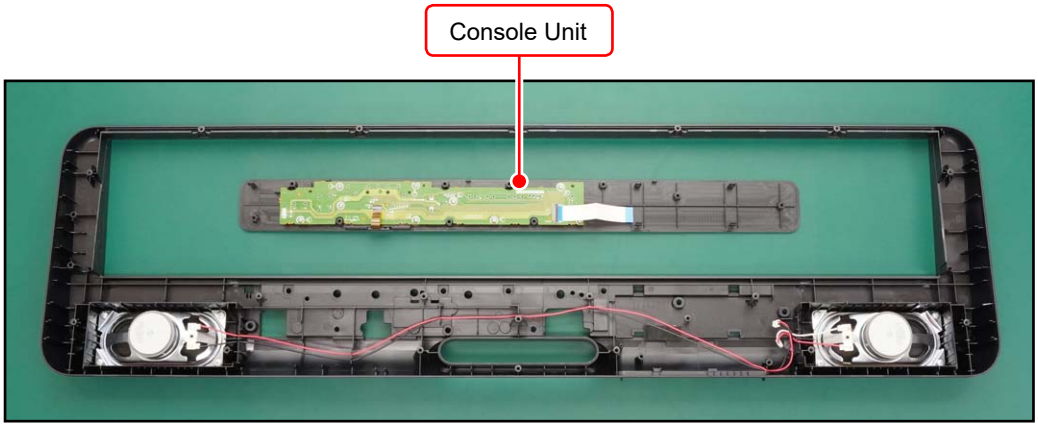

Notes on assembly

- Be sure that FFC is not caught between the Console Unit and the upper case.

D. Removing PCB UNIT/CNA1, LCD Unit

D-1. Remove the following parts.

- Upper case (P2)
- PCB UNIT/MAIN (P4)
- Console Unit (P5)

D-2. Undo S3 screws (x9).

No.	Photo	Size (mm)		Color	Q'ty
		ND	L		
S3		2.6	8	Silver	9

D-3. Remove the following cable.

No.	Cable		Connected From
CN302	FPC	16-pin, lower contact, w/ lock	LCD

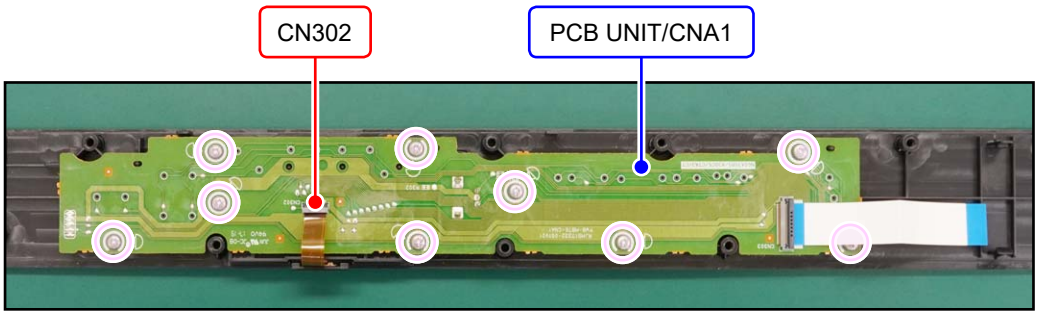

○ : S3

D-4. Move the CNA1 PCB by pulling down the encoder shaft from the dial knob and remove PCB UNIT/CNA1 (w/ CABLE/FFC/CNA1) and KNOB/ROTARY.

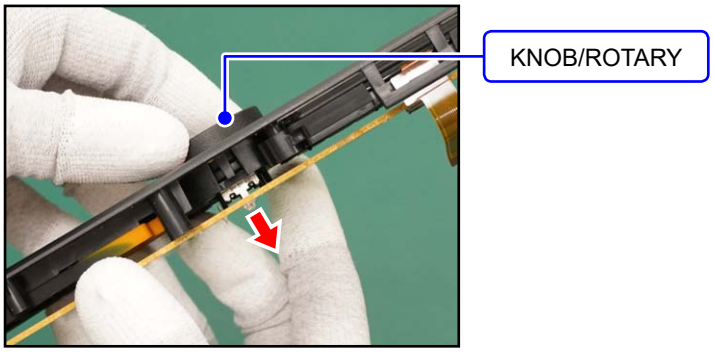

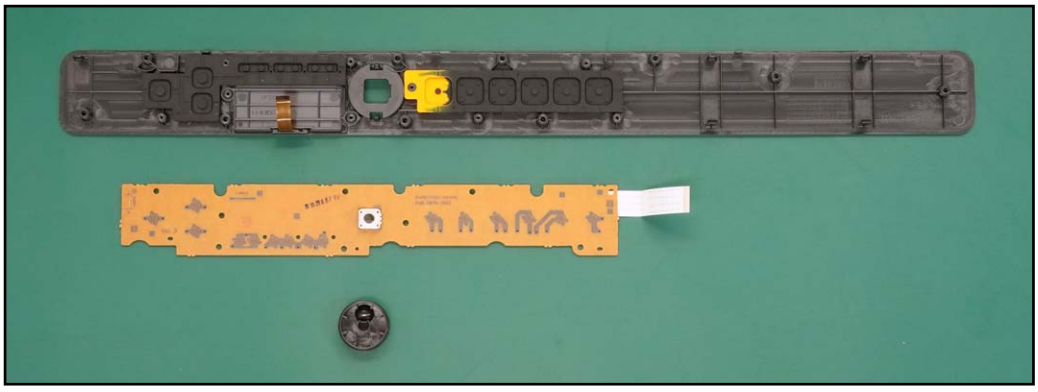

D-5. Remove RUBBER/KEY (x2) and LCD Unit from PANEL/CONSOLE (w/ PLATE/DISPLAY, FABRIC TAPE/3X10).

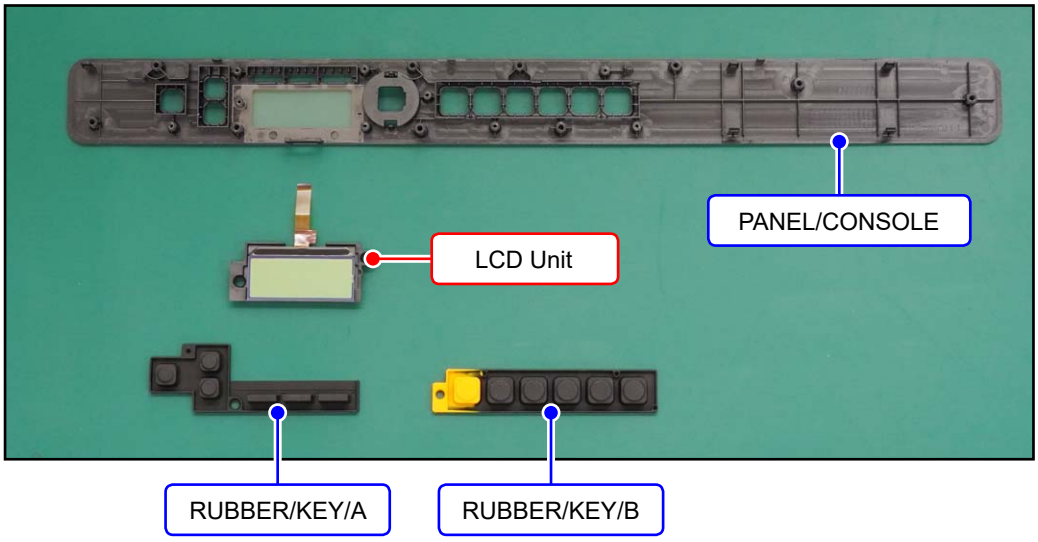

D-6. Remove LCD from HOLDER/LCD.

LCD is secured with D-TAPE/LCD.

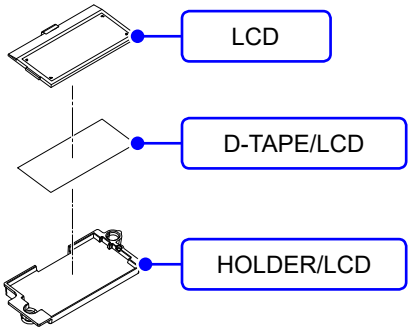

Notes on assembly

- Before assembling the LCD Unit, check that the LCD surfaces on the display plate side and LCD side are free from dust and dirt.

E. Removing SPEAKER

E-1. Remove the following part.

- Upper case (P2)

E-2. Disconnect the speaker cable from the MDA1 PCB.
For details, refer to “B. Removing PCB UNIT/MAIN” on page 4.

E-3. Undo S2 screws (x4) and remove SPEAKER (w/ cable).

No.	Photo	Size (mm)		Color	Q’ty
		ND	L		
S2		3.8	10	Silver	4

E-4. Unsolder to disconnect the following cable as necessary.

No.	Cable		Connected From
Ⓐ	Lead wires (x2)	From the above: Red, black	Left speaker
Ⓑ	Lead wires (x2)	From the above: White, red	Right speaker

<Left speaker> <Right speaker>

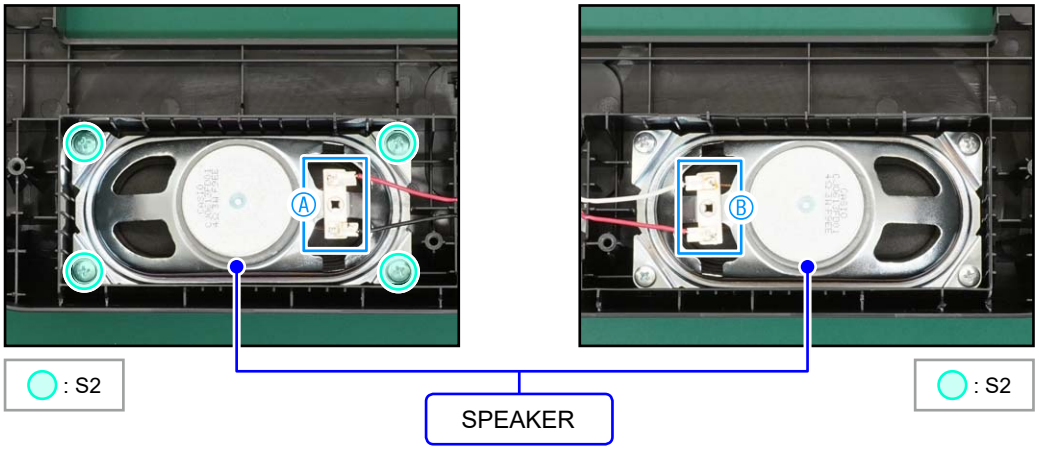

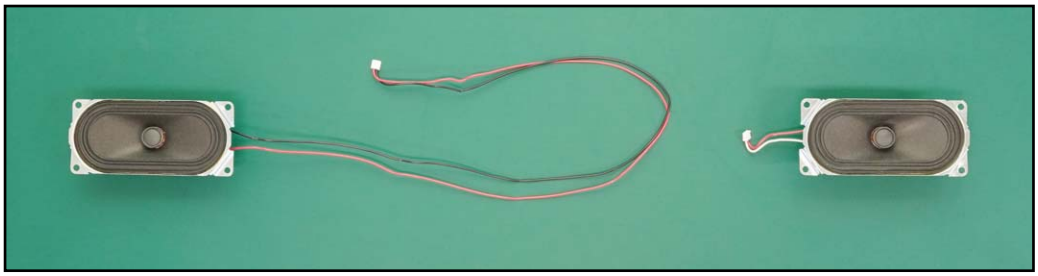

F. Removing KEY

F-1. Remove the following part.

- Upper case (P2)

F-2. Removing S4 screws (x21).

No.	Photo	Size (mm)		Color	Q'ty
		ND	L		
S4		2.6	18	Silver	21

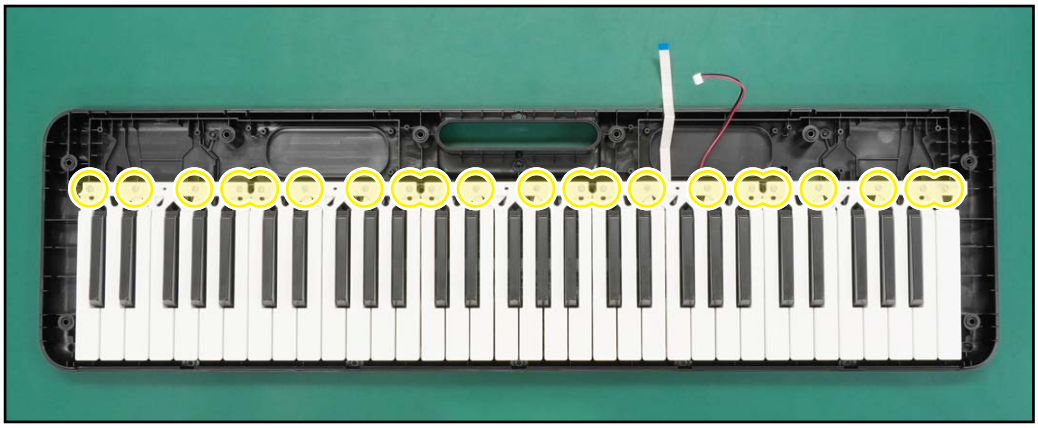

: S4

F-3. Removing WHITE KEY and BLACK KEY.

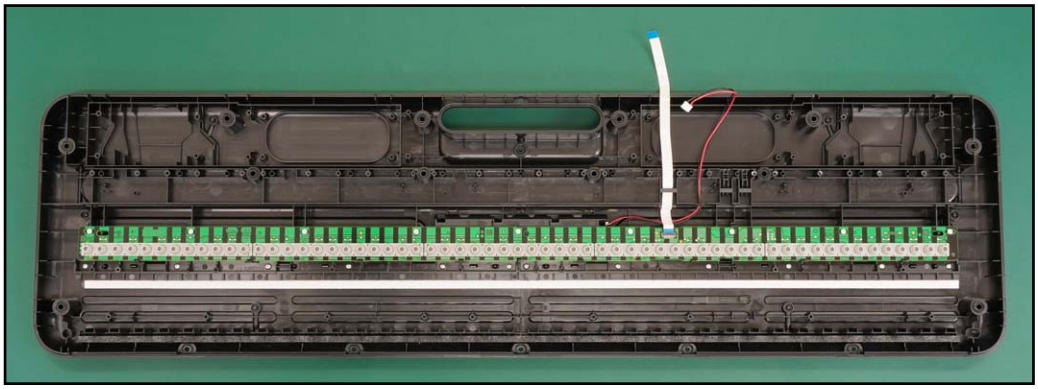

Notes on assembly

- Install the key as shown in the figure below.

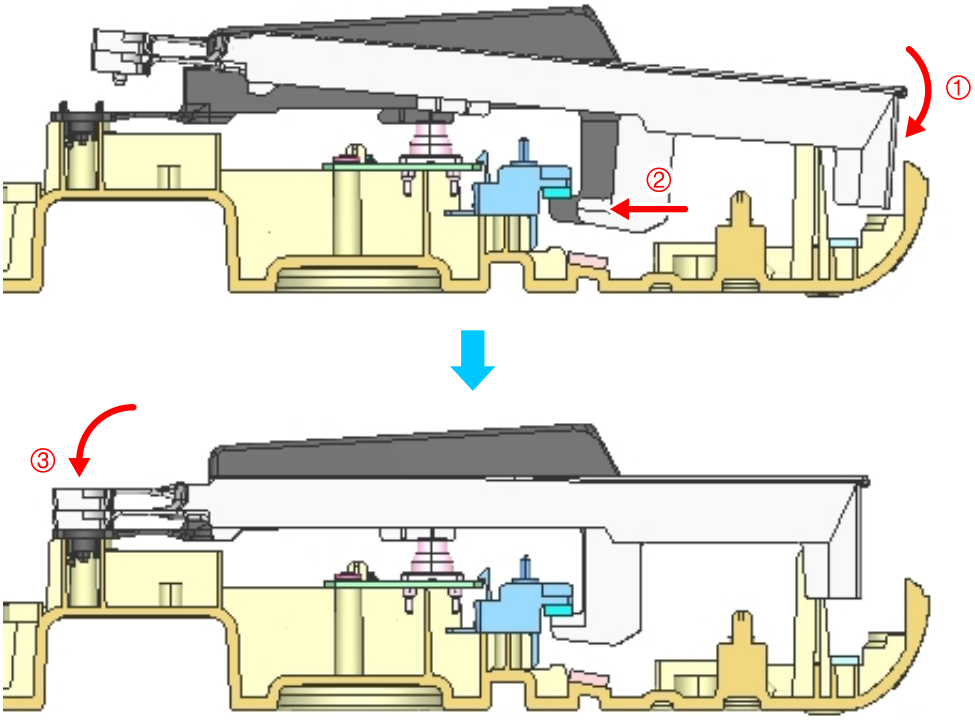

G. Removing PCB UNIT/KYC1

G-1. Remove the following parts

- Upper case (P2)
- KEY (P9)

G-2. Remove RUBBER/KEY/CB (x4) and RUBBER CONTACT/CS as necessary.

RUBBER CONTACT/CS differs from the others in length.

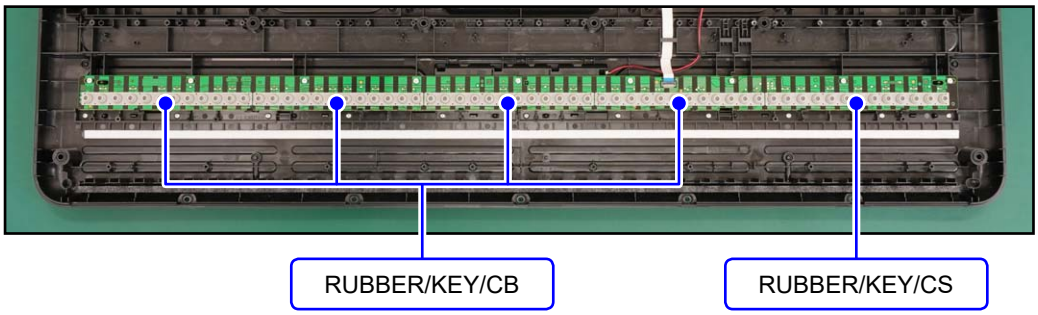

G-3. Undo S3 screws (x9) and remove PCB UNIT/KYC1 (w/ CABLE/FFC/KYC1, RUBBER/KEY).

No.	Photo	Size (mm)		Color	Q'ty
		ND	L		
S3		2.6	8	Silver	9

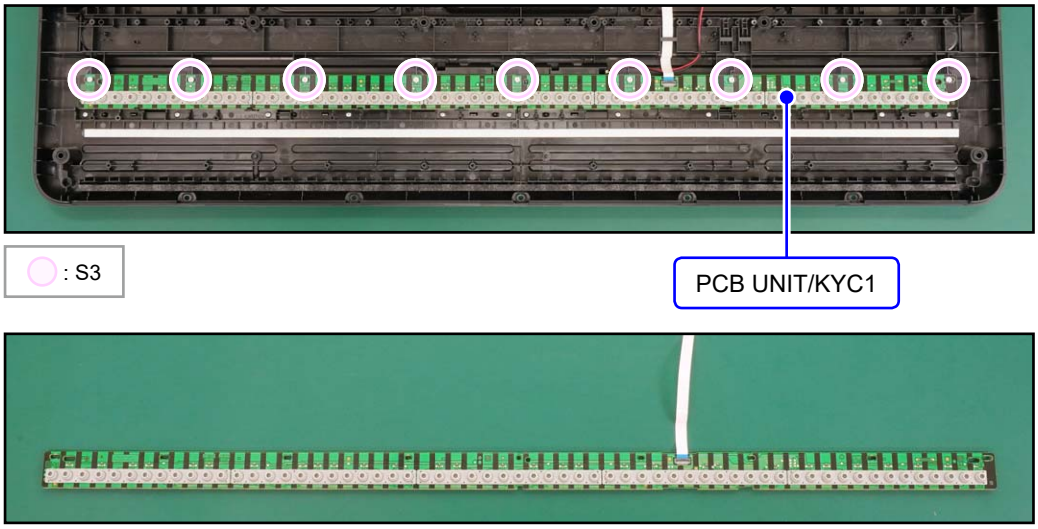

Notes on assembly

- Run the CABLE/FFC/KYC1 through the slit of the lower case.

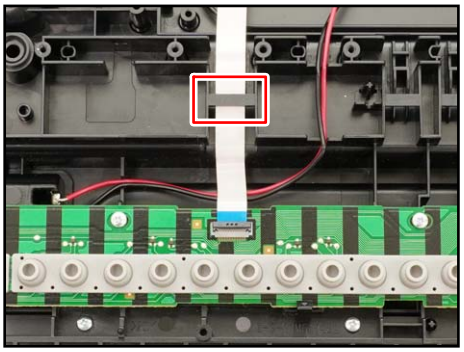

H. Removing U-LIMIT Unit

H-1. Undo S3 screws (x6).

H-2. Unhook and remove the U-LIMIT Unit.

No.	Photo	Size (mm)		Color	Q'ty
		ND	L		
S3		2.6	8	Silver	6

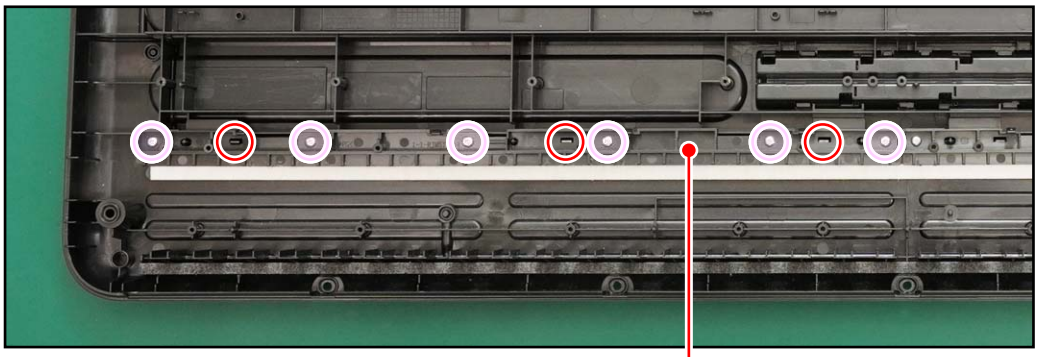

FUNCTION TEST

1. Overview

■ Test Items

To performs the test for this product, using the following modes.

- **Test Mode:** Performs an arbitrary test by launching the Test Mode.
- **User Mode:** Launches to perform the test in a normal operation state.

No.	Item	Necessary Items
Test Mode		
A	ROM Version Check	–
B	Button Test	–
C	Dial Test	–
D	LCD Test	–
E	Pedal Test	SP-3 pedal (bundled Items) or SP-20 pedal (sold separately)
F	USB Test	PC, micro USB cable
User Mode (normal operation state)		
G	Keyboard Test	–
H	Volume Test	–
I	Headphones Test	Headphones (stereo mini plug)
J	Chattering Sound Test	–

Testing requires the AC adaptor or AA-size dry batteries (x6) with enough capacity.

Perform the Chattering Sound Test only when it is necessary to check the operation after repair of chattering sound, for example. The Chattering Sound Test emits a loud sound. Be sure to get an OK of a customer before performing the test.

2. Launching the Test Mode

■ Launching the Mode

(1) Connect the AC adaptor or load the AA-size dry batteries (x6).

(2) While holding down the following keys and press [⏻] button to turn on the power to launch the Test Mode.

- **Button:** HOME, TEMPO, MY SETUP

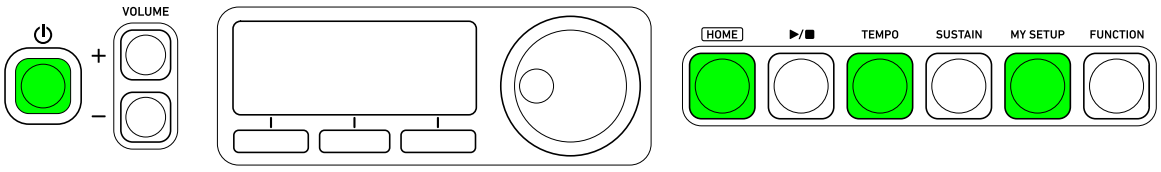

When the Test Mode is launched, the root screen appears.

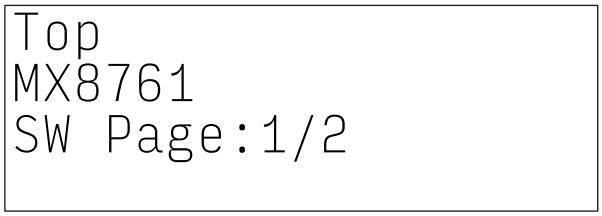

■ Exiting the Mode

Press and hold [⏻] button until the screen shuts down.

Be sure to turn off the power when the test is finished.

3. Test Procedure

A. ROM Version Check (This item is not an inspection)

A-1. Press [VOLUME +] button to display the ROM version.

The displayed ROM version may differ depending on the individual products. (The figure shown below indicates an example of display.)

```
Version

V:01.02
```

A-2. Press [FUNCTION] button to return to the root screen.

B. Button Test

B-1. Press [VOLUME –] button to display the following screen.

```
Switch
```

B-2. Press the buttons in the sequence to check that the buttons operate properly.
For the button sequence, refer to the following figure.

- **OK:** “OK” appears. When press the last button, “Complete” appears.
- **NG:** “NG” appears.

```
Switch

OK.
```

B-3. Press [FUNCTION] button to return to the root screen.

Sequence of the button to press

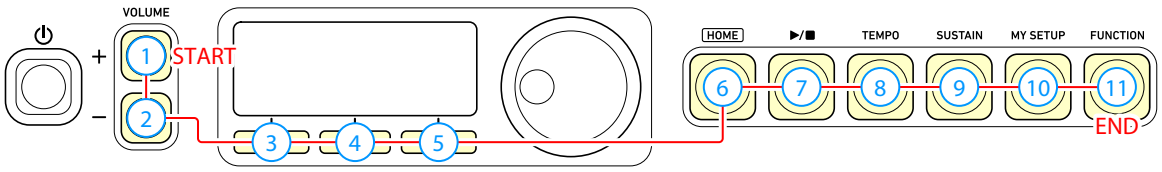

C. Dial Test

Check that the dial rotates smoothly. If you feel a catch in the dial or it does not rotate smoothly, evaluate the test as NG.

C-1. Press [HOME] button to display the following screen.

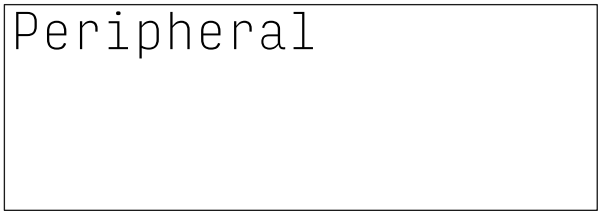

C-2. Rotate the dial clockwise by one turn or more and check that the value changes correctly.

Rotating the dial clockwise increases the value.

The dial position at the beginning of the test is “0”.

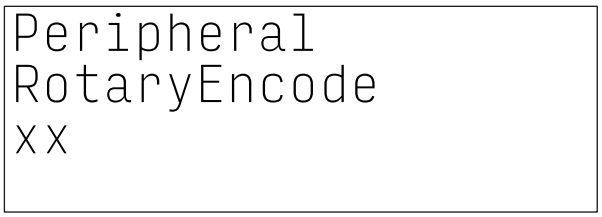

C-3. Rotate the dial counter-clockwise by one turn or more and check that the value changes correctly.

Rotating the dial counter-clockwise decreases the value.

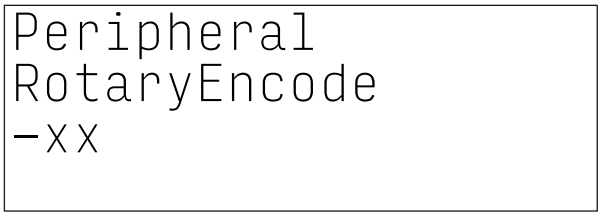

C-4. Press [FUNCTION] button to return to the root screen.

D. LCD Test

D-1. Press [3 Buttons Left] button to display the following screen.

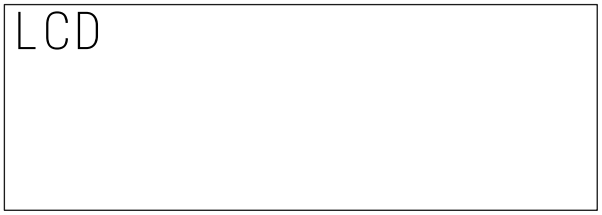

D-2. Press [3 Button Center] button to display the following screen.

D-3. Press [VOLUME +] button and check that all dots are lit.



D-4. Press [VOLUME +] button and check that all dots are turned off.



D-5. Press [FUNCTION] button to return to the root screen.

E. Pedal Test

E-1. Connect the SP-3 or SP-20 pedal to the PEDAL jack.

E-2. Press [HOME] button to display the following screen.

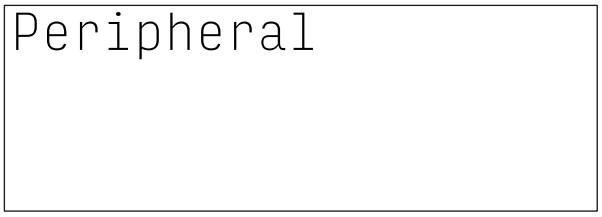

E-3. Press and release the pedal and check that the following screen appears.

When the Pedal is Pressed	When the Pedal is Released
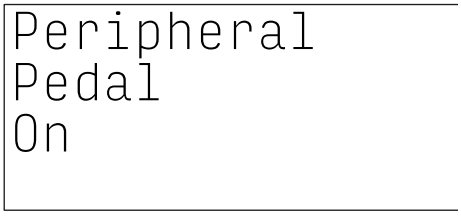	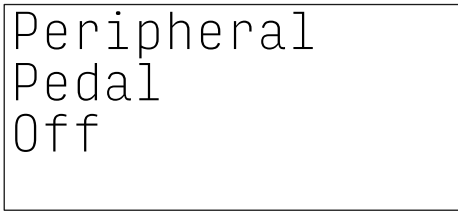

E-4. Press [FUNCTION] button to return to the root screen.

F. USB Test

F-1. Connect the USB port of keyboard and PC with a micro USB cable.

F-2. Touch [HOME] button to display the following screen.

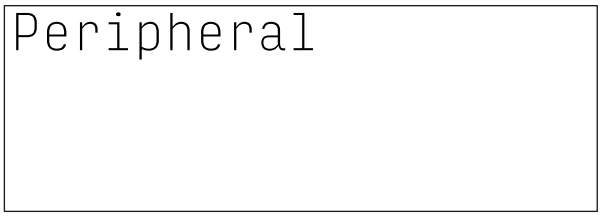

F-3. Connect and disconnect the USB cable and check that the following screen appears.

Connecting	Disconnect
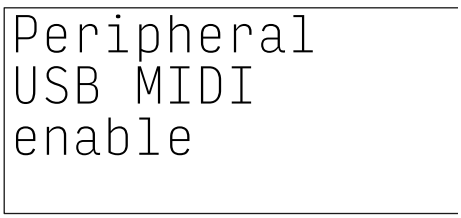	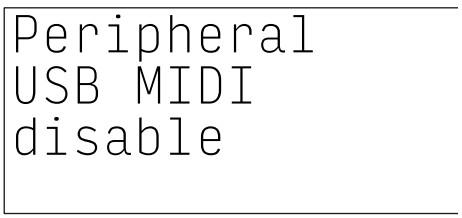

F-4. Press [FUNCTION] button to return to the root screen.

G. Keyboard Test

This test is performed in the User Mode (normal operation state).

G-1. Press [⏻] button to turn on the power.

G-2. Press the keys in order starting from the key at the right end and check that the sound is properly produced.

Check all keys.

G-3. Press and hold [⏻] button to turn off the power.

H. Volume Test

This test is performed in the User Mode (normal operation state).

H-1. Press [⏻] button to turn on the power.

H-2. Press [▶/■] button while holding down [TEMPO] button to starts the demo play.

Rotate the dial to select another song to play.

H-3. Press [VOLUME –] button to minimize the volume and check that you hear no sound.

H-4. Press [VOLUME +] to increase the volume and check that the volume of the sound from the speaker changes accordingly.

It is unnecessary to increase the volume to maximum.

H-5. Press and hold [⏻] button to turn off the power.

I. Headphones Test

This test is performed in the User Mode (normal operation state).

I-1. Press [⏻] button to turn on the power.

I-2. Press [▶/■] button while holding down [TEMPO] button to starts the demo play.

Rotate the dial to select another song to play.

To stop the demo play, press [▶/■] button.

I-3. Connect a headphones to the PHONES jack.

I-4. Check that the speaker mutes and that the sound is produced from the headphones instead.

I-5. Disconnect the headphones from the keyboard and check that the sound is produced from the speaker.

I-6. Press and hold [⏻] button to turn off the power.

J. Chattering Sound Test

This test is performed in the User Mode (normal operation state).

Perform this test only when it is necessary to check the operation after repair of chattering sound, for example. This test emits a loud sound. Be sure to get an OK of a customer before performing the test.

J-1. Press [⏻] button to turn on the power.

J-2. Press [VOLUME] button until the volume is set at “8”.

J-3. Rotate the dial to set the tone to “046 : Parc Organ 2”.

J-4. Press a key and check that the chattering sound is unheard.

Check all keys.

J-5. Press and hold [⏻] button to turn off the power.

BLOCK AND WIRING DIAGRAM

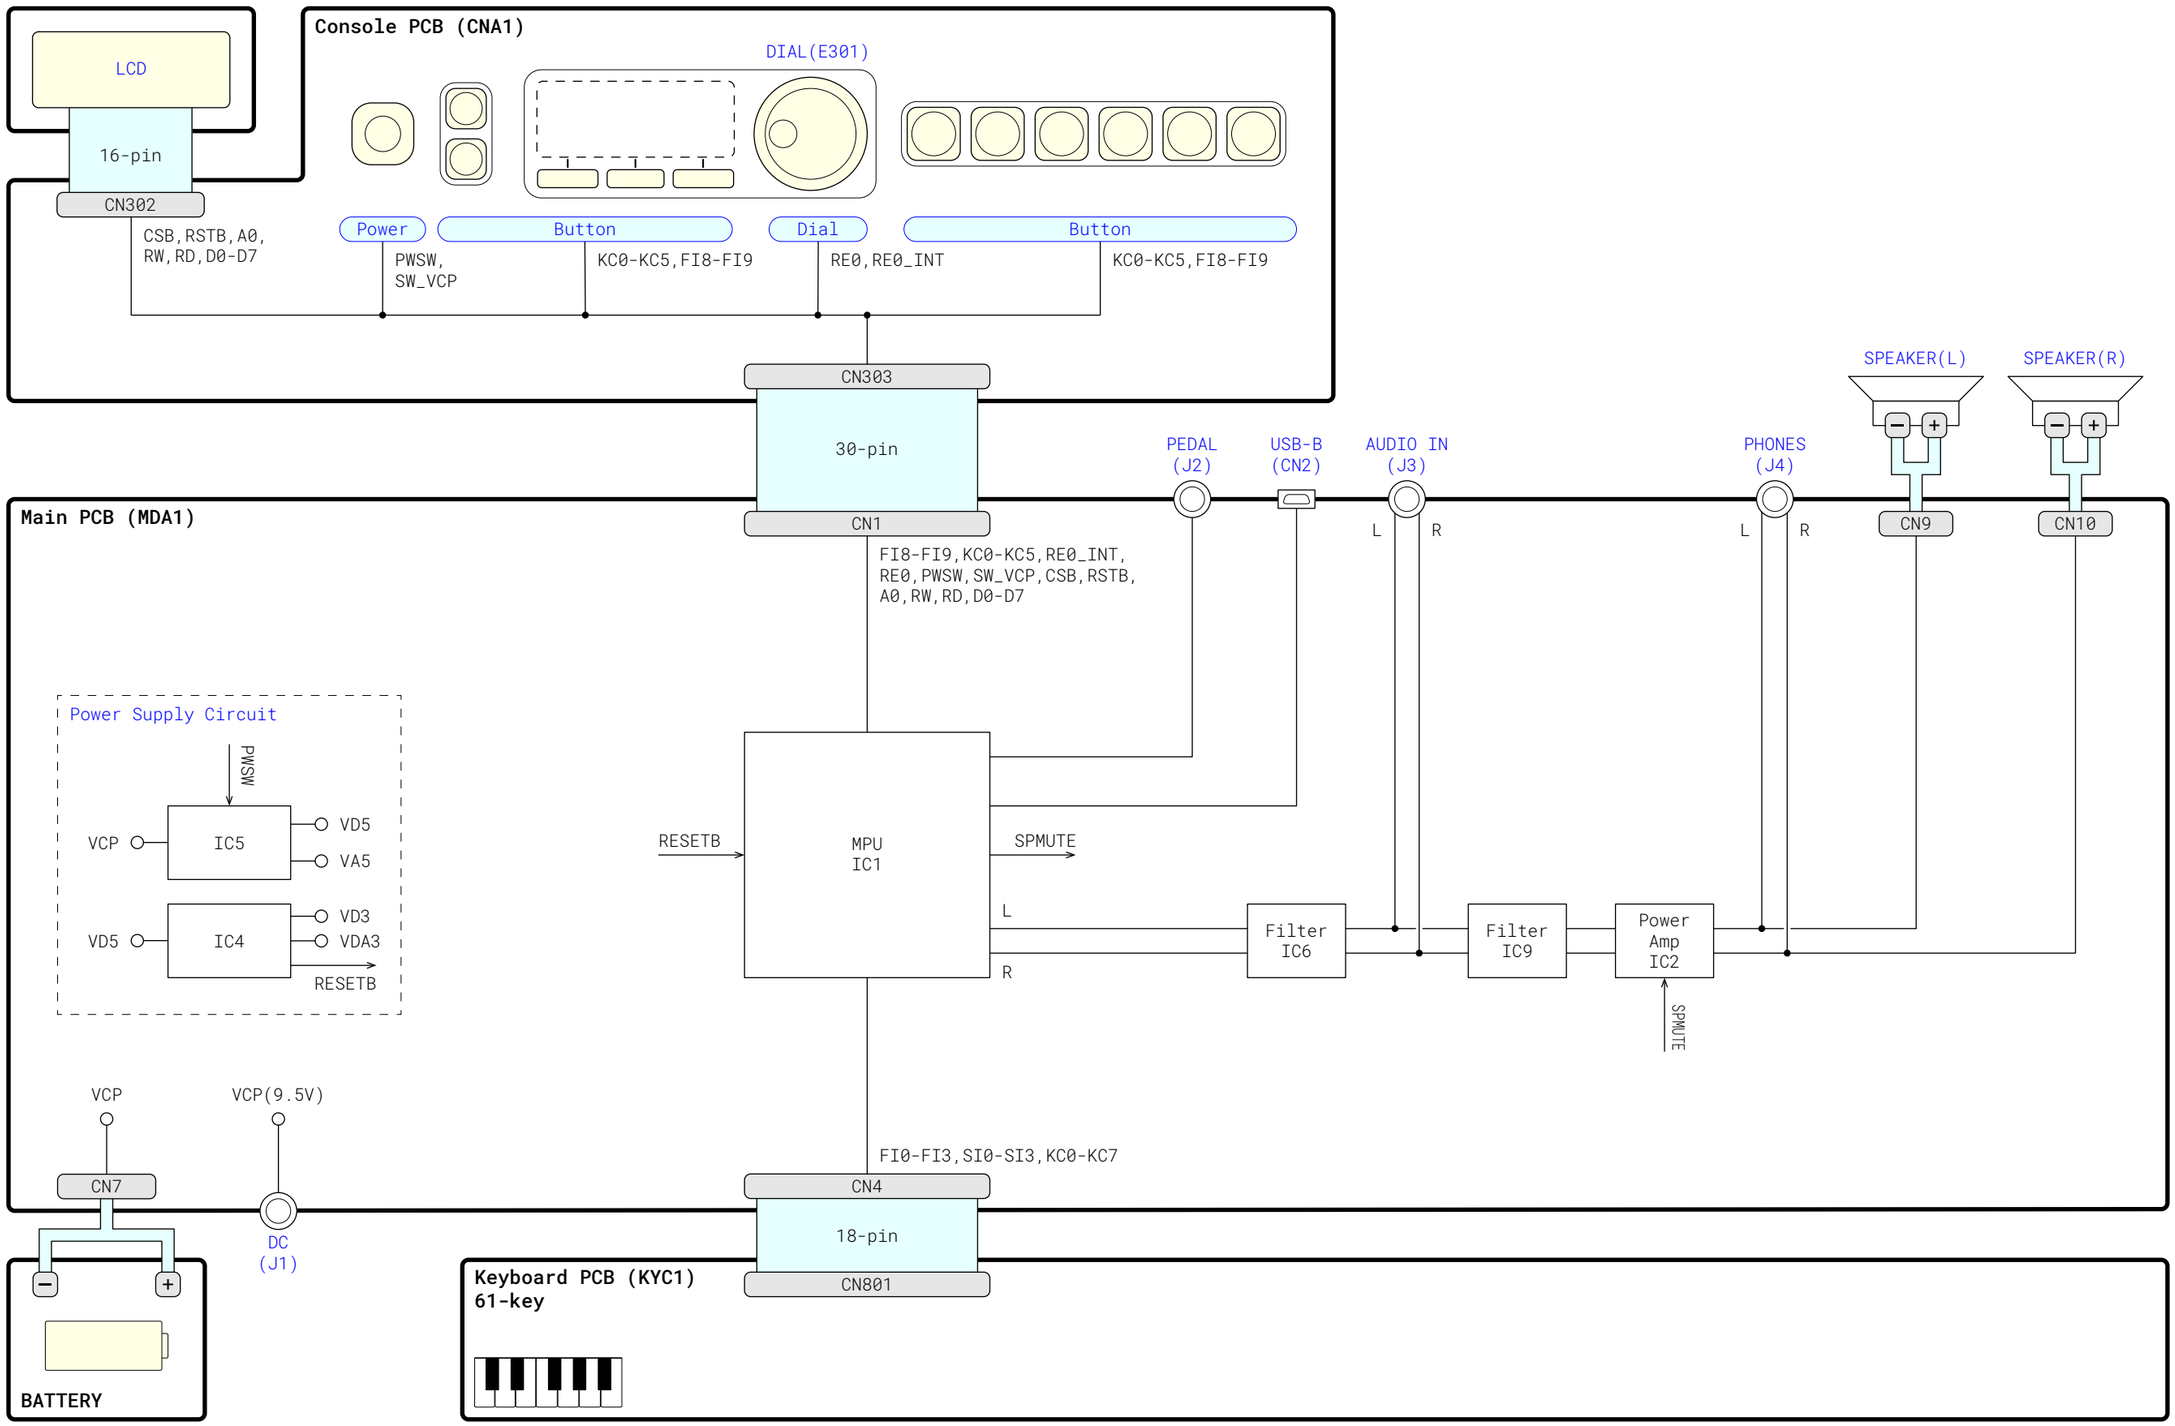

CIRCUIT DESCRIPTION

■ Nomenclature of Keys

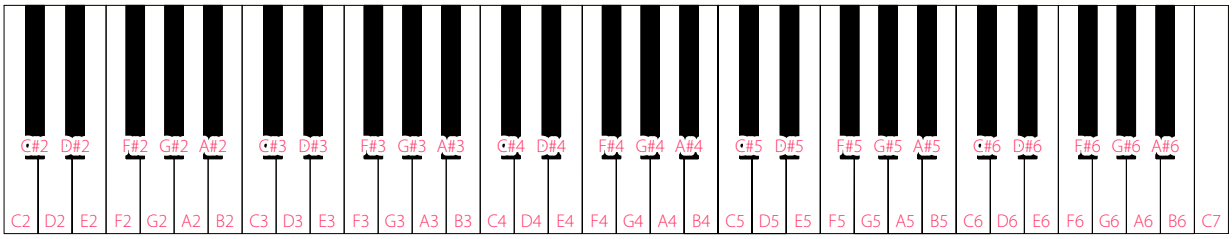

■ Key Matrix

	KC0	KC1	KC2	KC3	KC4	KC5	KC6	KC7
KI0	C2	C#2	D2	D#2	E2	F2	F#2	G2
KI1	G#2	A2	A#2	B2	C3	C#3	D3	D#3
KI2	E3	F3	F#3	G3	G#3	A3	A#3	B3
KI3	C4	C#4	D4	D#4	E4	F4	F#4	G4
KI4	G#4	A4	A#4	B4	C5	C#5	D5	D#5
KI5	E5	F5	F#5	G5	G#5	A5	A#5	B5
KI6	C6	C#6	D6	D#6	E6	F6	F#6	G6
KI7	G#6	A6	A#6	B6	C7			

■ Button Matrix

	KC0	KC1	KC2	KC3	KC4	KC5
FI8	FUNCTION	TEMPO	HOME	3 buttons (Right)	3 buttons (Center)	Volume (–)
FI9	MY SETUP	SUSTAIN	▶/■ (Start/Stop)		Volume (+)	3 buttons (Left)

PRINTED CIRCUIT BOARDS

Main PCB: M876-MDA1

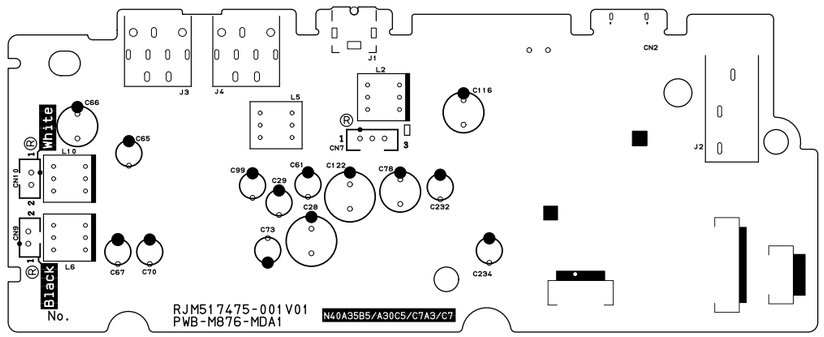

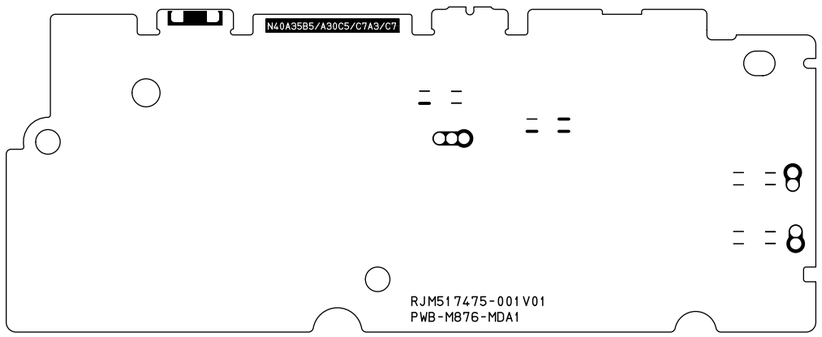

Console PCB: M876-CNA1

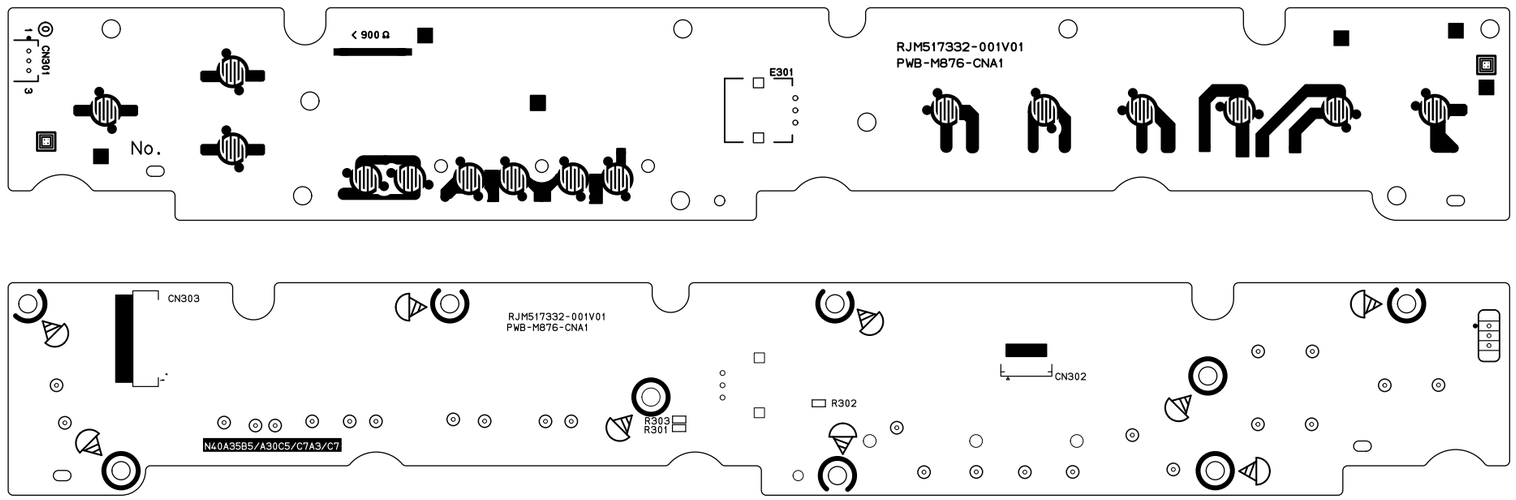

Keyboard PCB: MAGL-KYC1

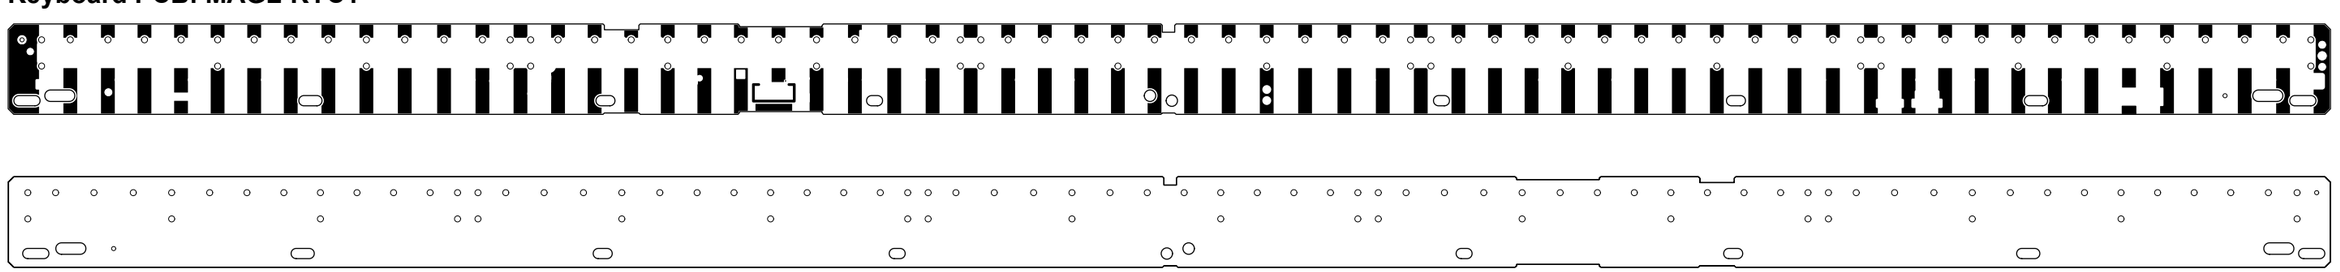

SCHEMATIC DIAGRAMS

Main PCB: M876-MDA1 (1/2)

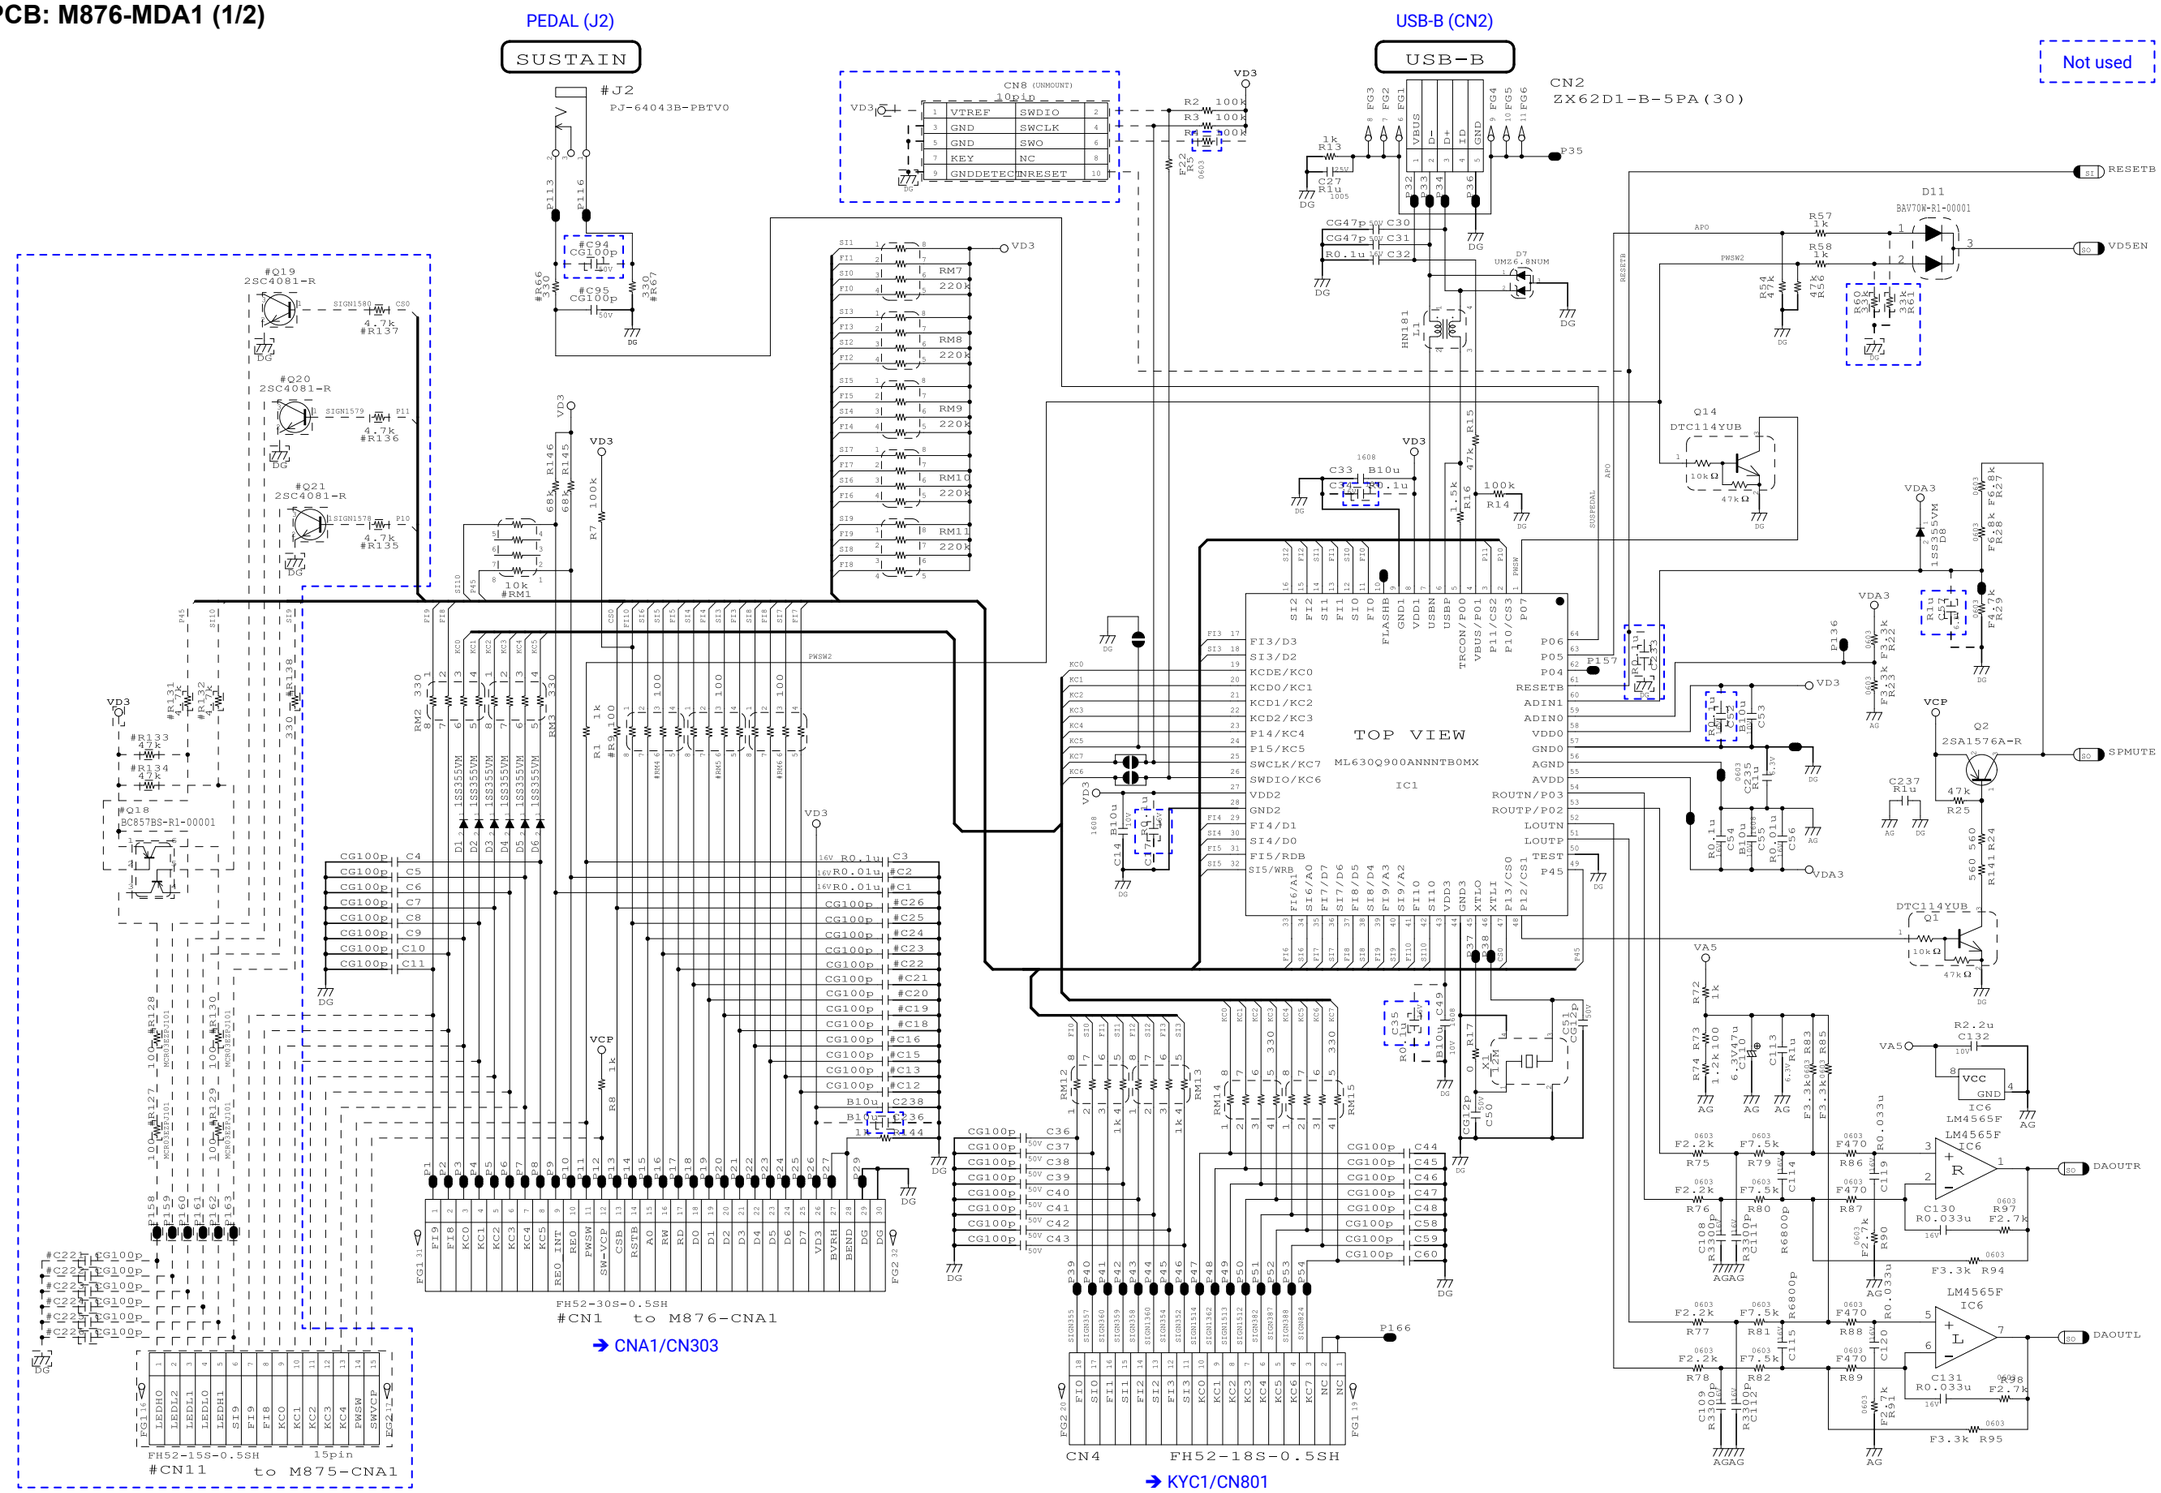

Main PCB: M876-MDA1 (2/2)

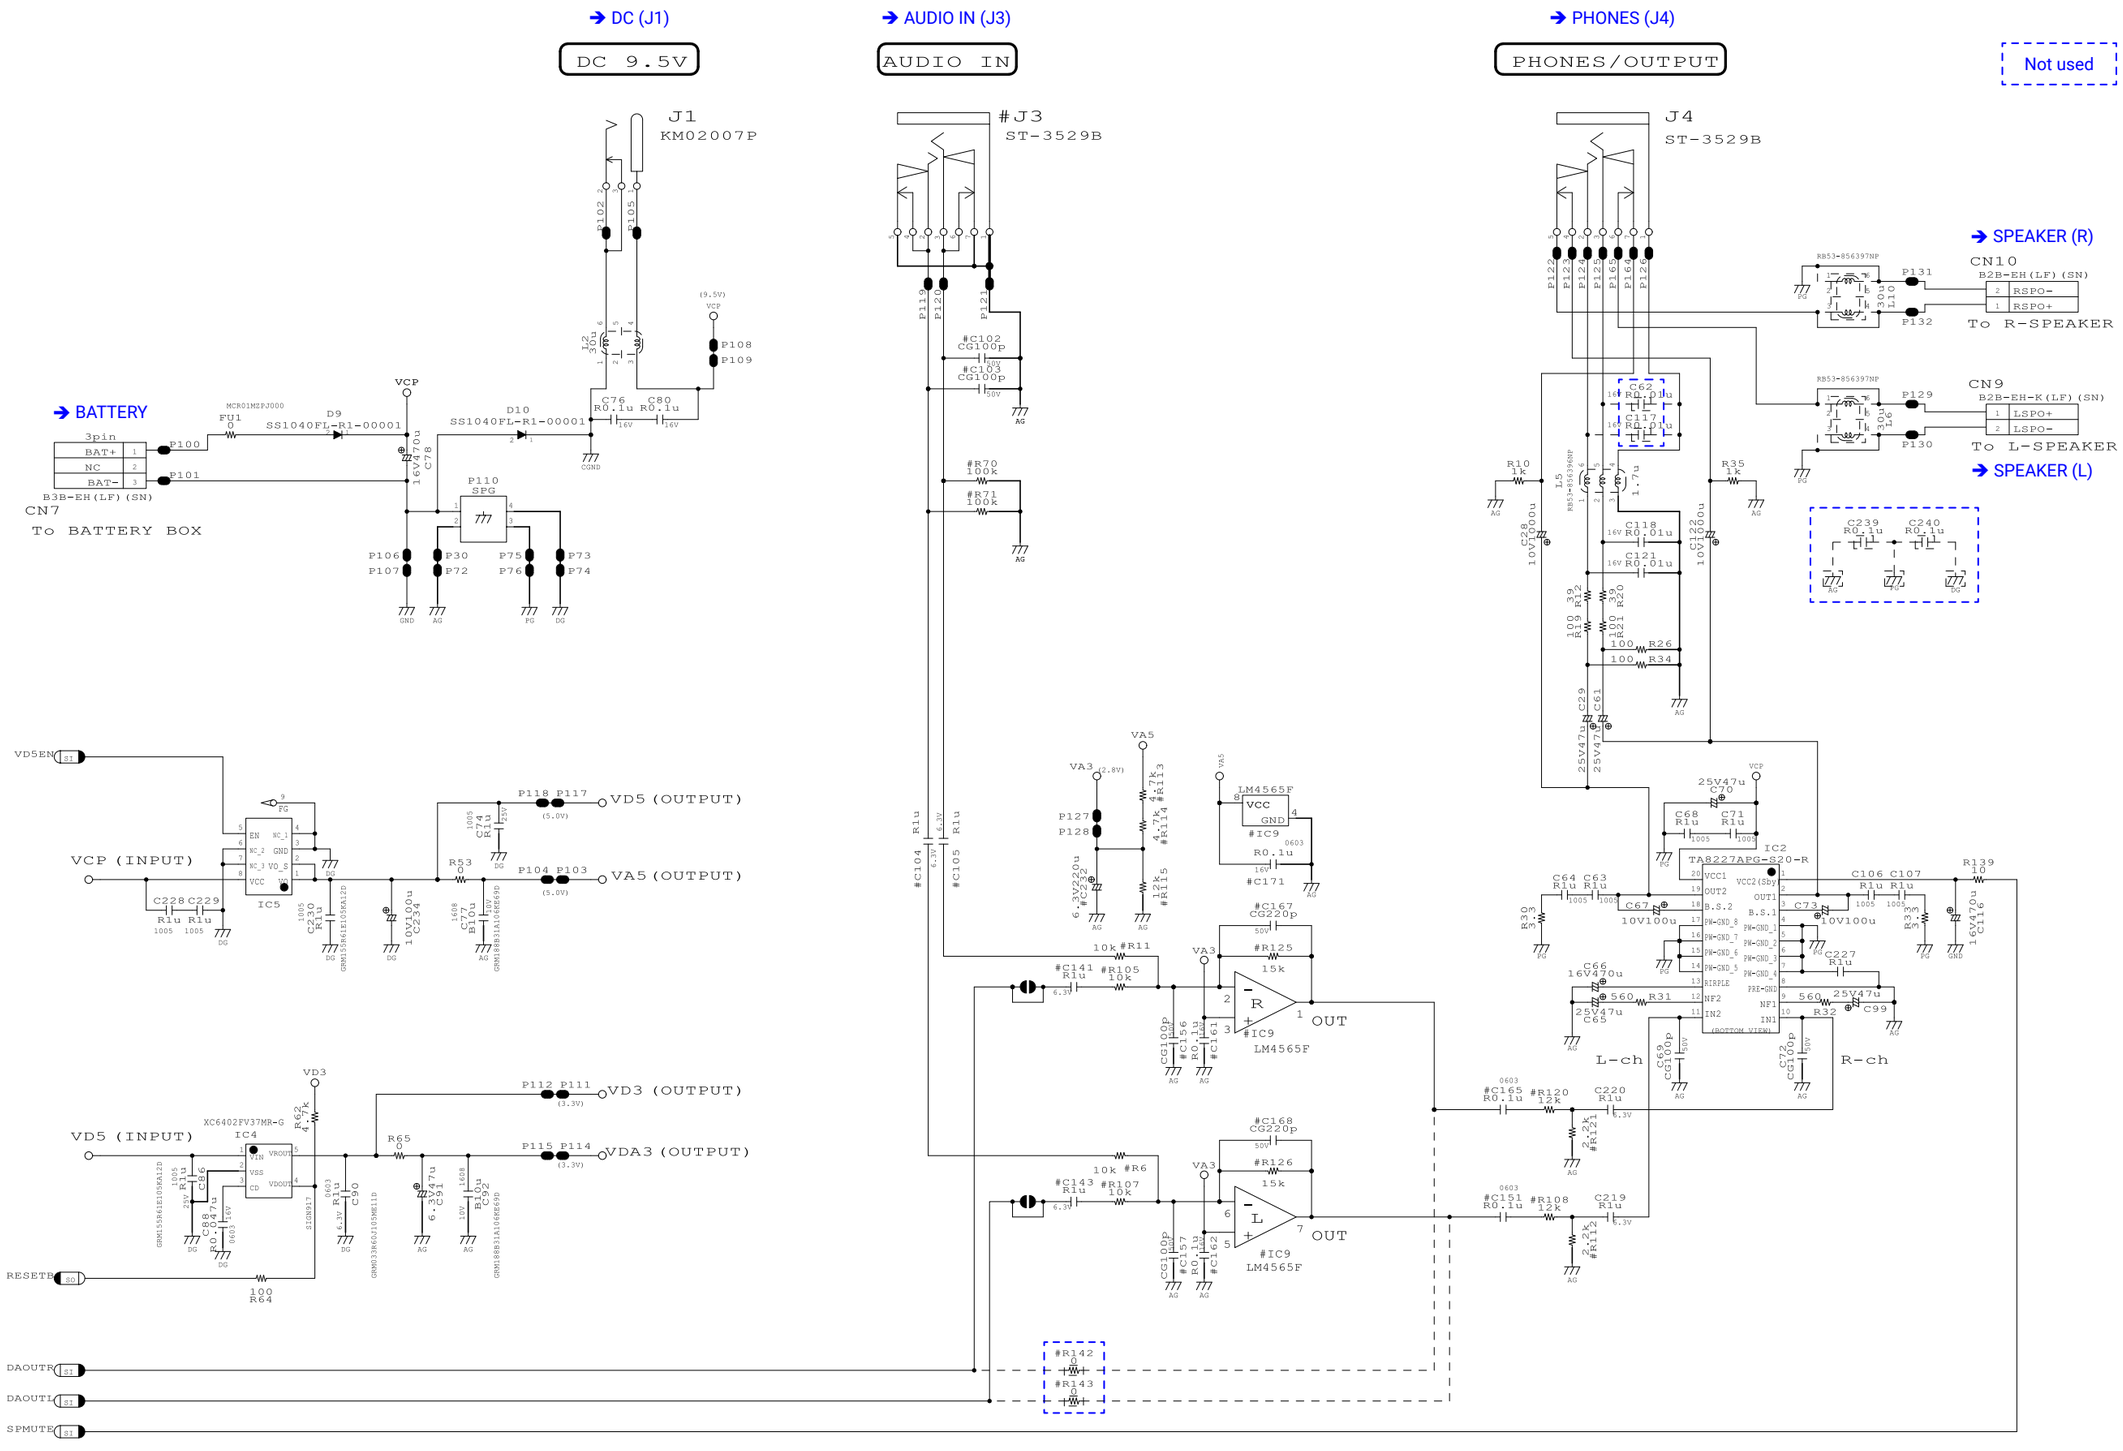

Console PCB: M876-CNA1

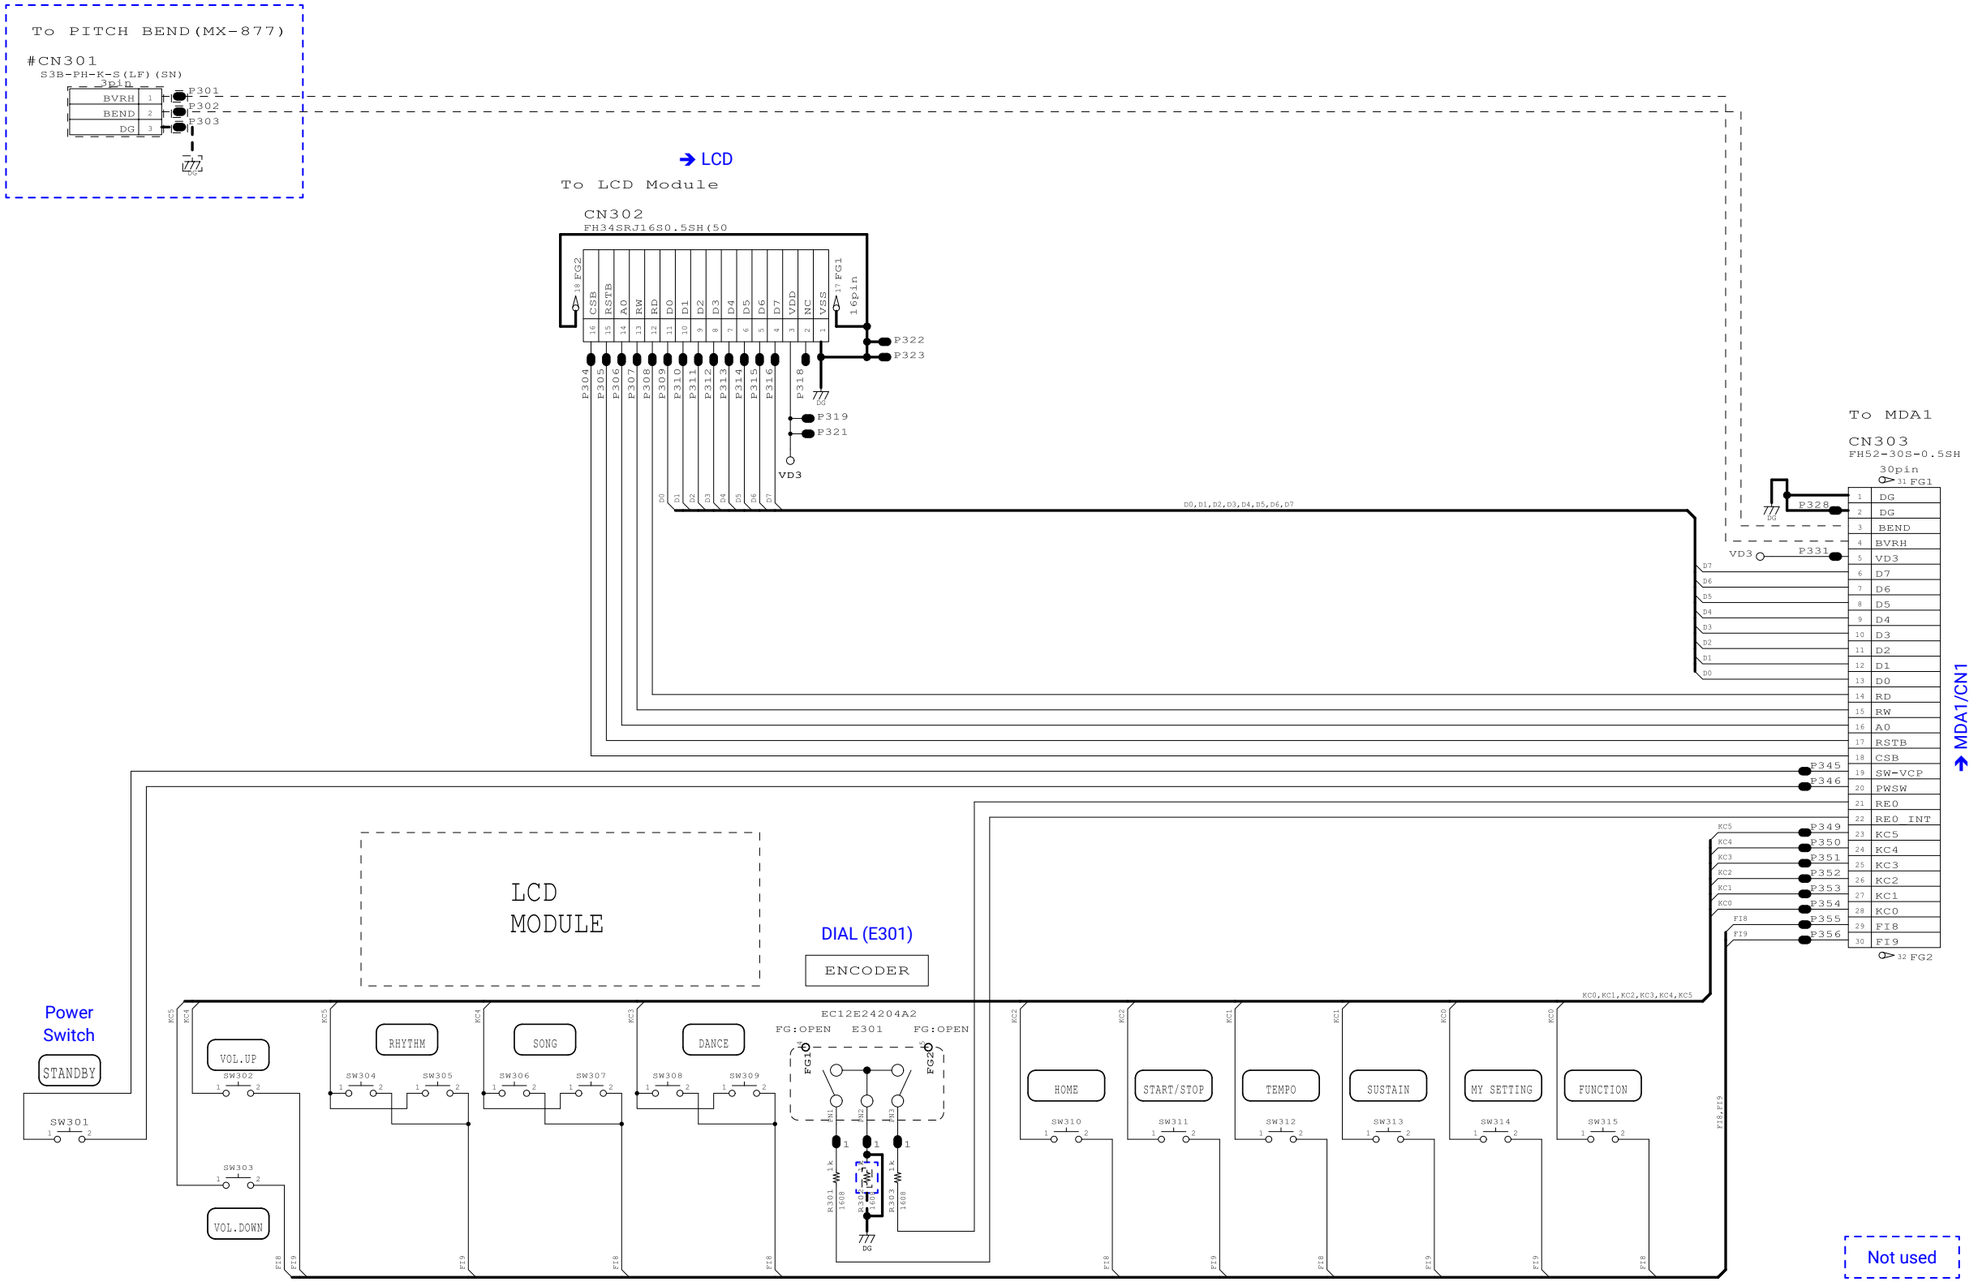

Keyboard PCB: MAGL-KYC1

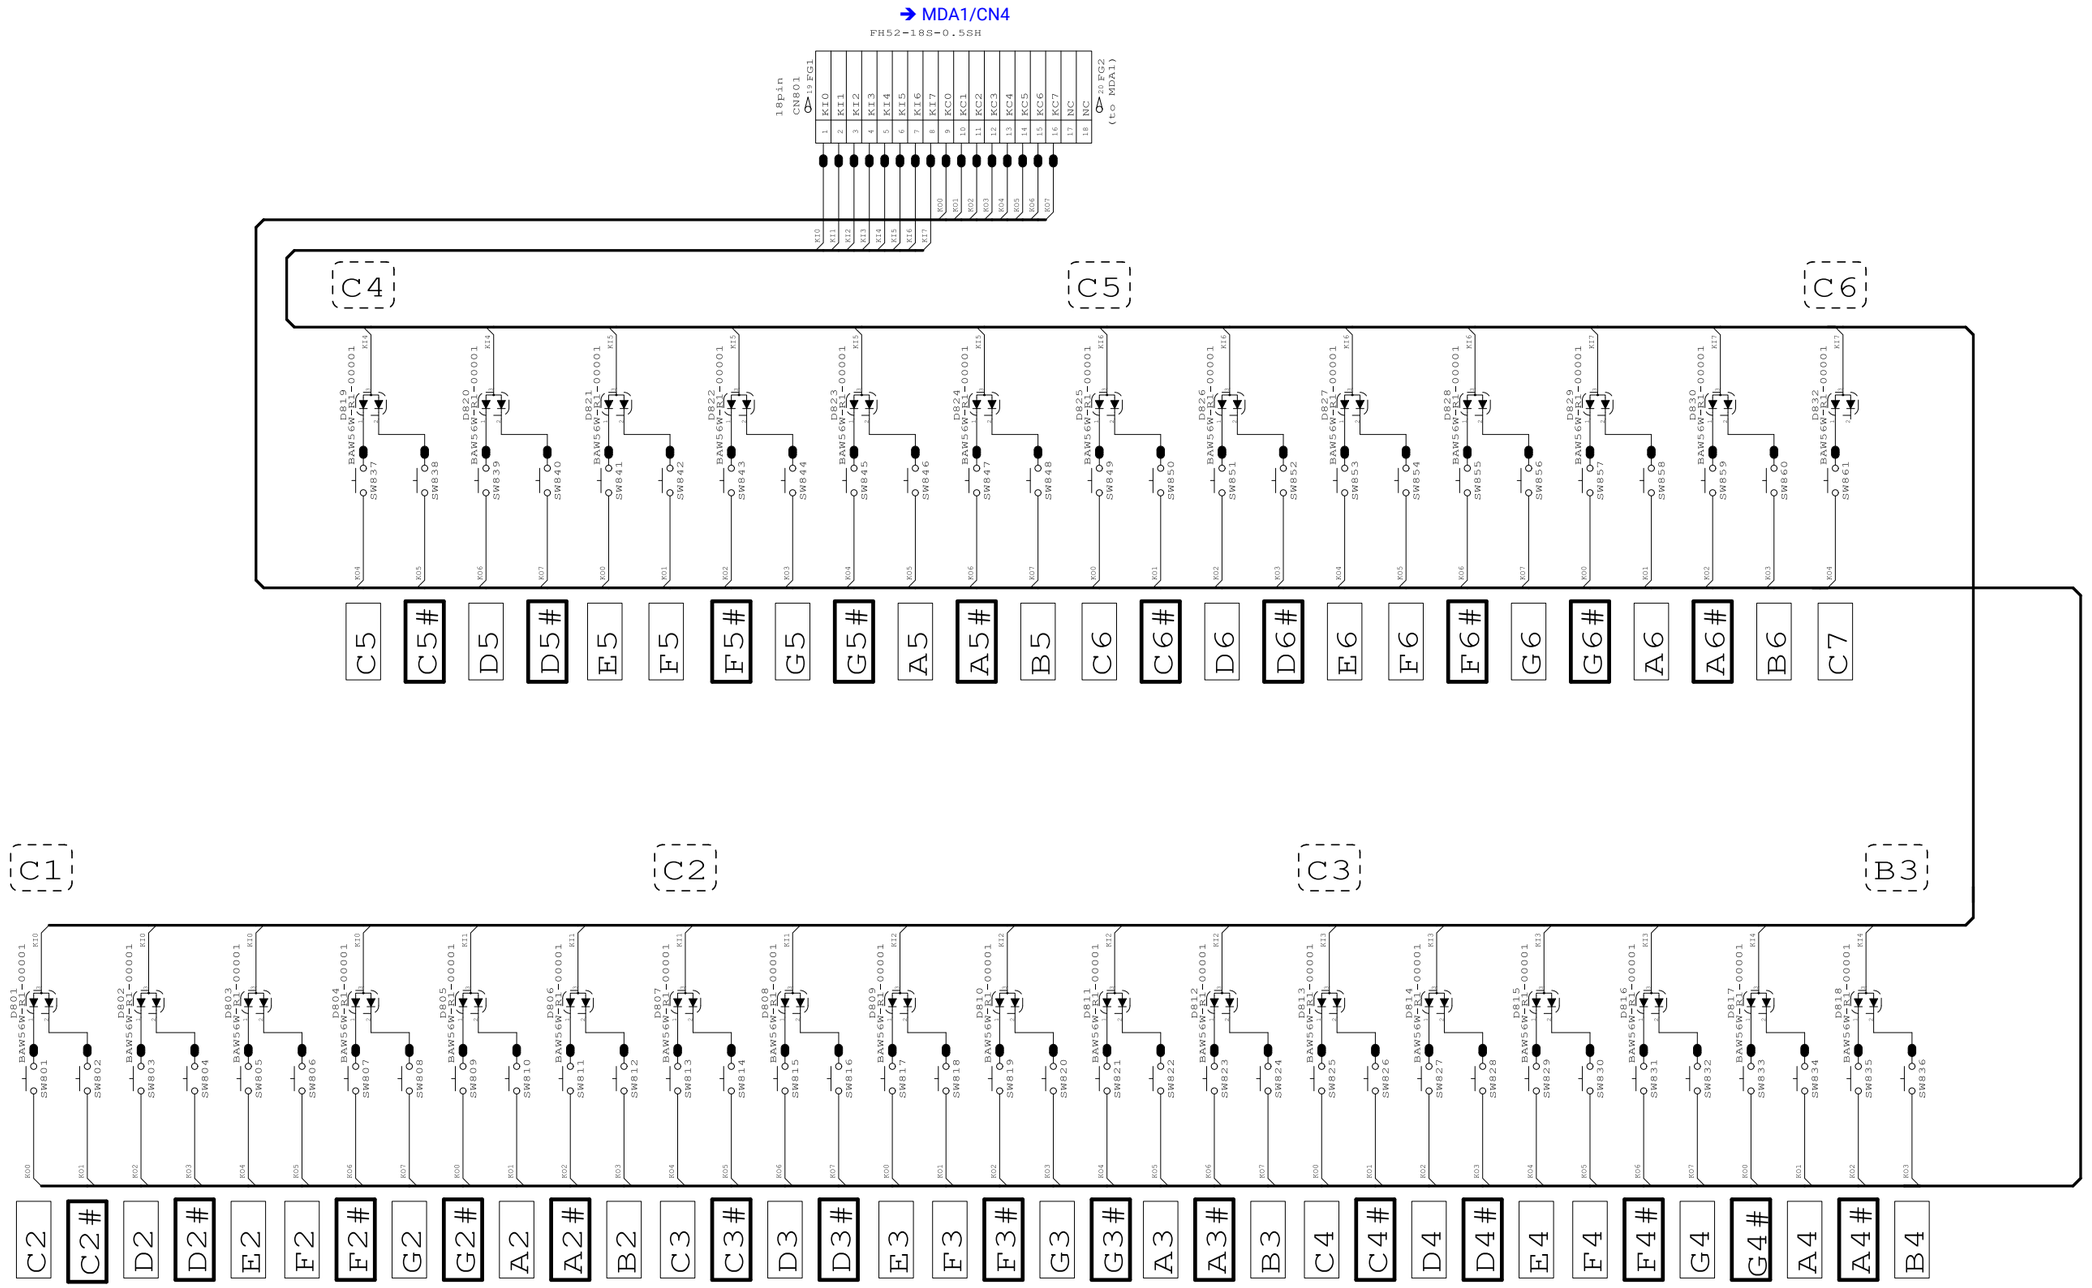

SPECIFICATIONS

Keyboard	61 keys
Maximum Polyphony	48 notes
Tones	
Preset Tones	400 preset tones (1 stereo piano tone)
Effects	Reverb (10 types, Off)
Metronome	
Beat	Off, 1 to 16 beats
Tempo	20 to 255
Song Bank	
Preset Songs	60 songs
Part Off	Left hand, right hand, both hands
Auto Accompaniment	
Preset Rhythms	77 types
One Touch Presets	77 types
Other	INTRO, ENDING; chord input mode switching
Dance Music Mode	
Preset Patterns	50 types; Dance Music effects
Demo Play	Looped play of all built-in Song Bank songs (60 songs)
Function Volume Adjustment	Metronome, Rhythm, Song, Dance Music
Other Functions	
Transpose	±1 octave (–12 to 0 to +12 semitones)
Tuning	A4 = 415.5 to 465.9 Hz (Initial Default: 440.0 Hz)
MIDI	16 multi-timbre received, GM Level 1 standard
APP Function	
Supported Devices	iOS, Android (USB terminal connection)
Jacks	
USB Port	Micro-B
PEDAL Jack	Standard jack (6.3mm) (Pedal sustain, sostenuto, soft, start/stop)
PHONES/OUTPUT Jack	Stereo mini jack (3.5mm)
AUDIO IN Jack	Stereo mini jack (3.5mm) Input impedance: 10 kΩ; Input sensitivity: 200 mV
AC Adaptor Terminal	9.5V DC

Power Requirements	2-Way Power
Batteries	6 AA-size alkaline batteries or AA-size rechargeable nickel metal hydride batteries
Continuous Operation	Approximately 16 hours (alkaline batteries), approximately 13 hours (rechargeable nickel metal hydride batteries)* * Measured values while using eneloop batteries. Actual battery life may be shorter depending on battery type, performance style, or operation environment.
AC Adaptor	AD-E95100L (JEITA Standard, with unified polarity plug)
Auto Power Off	After approximately 30 minutes of non-operation; Can be disabled.
Speakers	13cm x 6cm (oval) x 2 (Output: 2.0W + 2.0W)
Power Consumption	9.5V ⎓ 5.5W
Dimensions	93.0 (W) x 25.6 (D) × 7.3 (H) cm (36 5/8 x 10 1/16 x 2 7/8 inch)
Weight	Approximately 3.3kg (7.3 lbs) (Excluding batteries)

EXPLODED VIEW

General

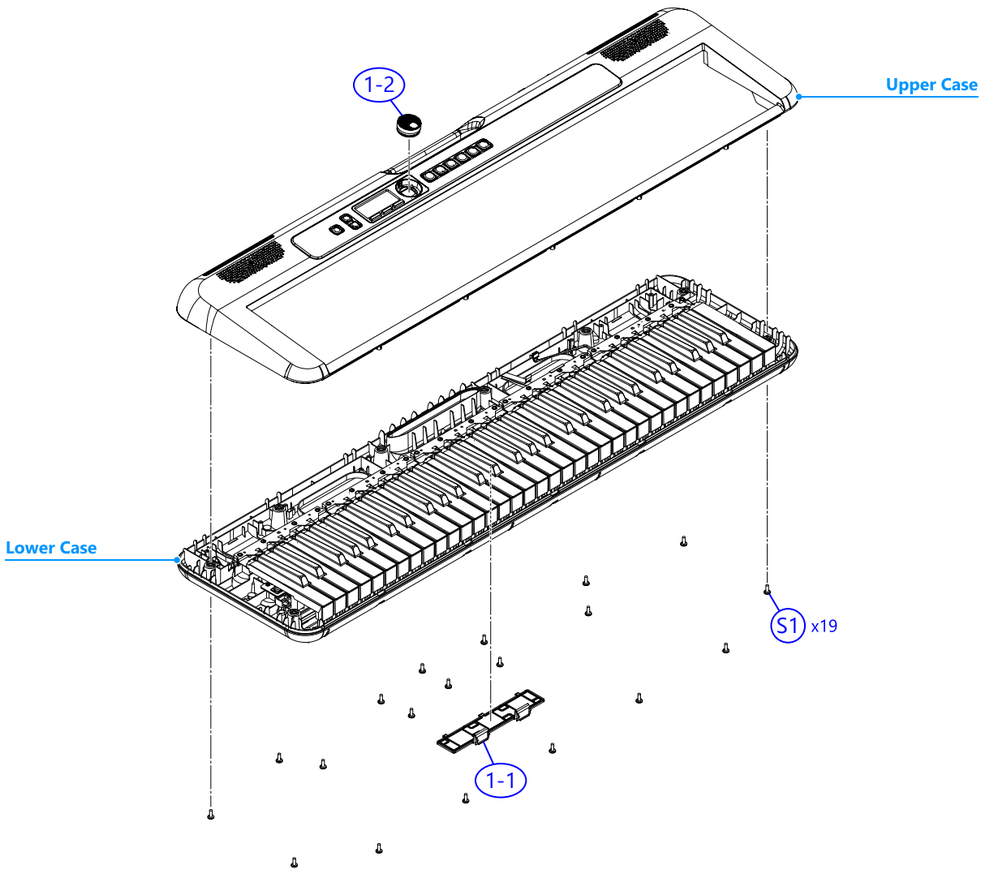

PARTS LIST

1: CT-S200BK_DI
2: CT-S200BK_EU
3: CT-S200BK_UK
4: CT-S200BK_US
5: CT-S200WE_DI
6: CT-S200WE_EU
7: CT-S200WE_UK
8: CT-S200WE_US
9: CT-S200RD_DI
10: CT-S200RD_EU
11: CT-S200RD_UK
12: CT-S200RD_US

N	Item	Code No.	Parts Name	Specification	Q'ty												R	Note
					1	2	3	4	5	6	7	8	9	10	11	12		
	General																	
N	1-1	10605034	COVER ASSY/BATTERY	TK-RJM517799*001	1	1	1	1									X	
N	1-1	10605035	COVER ASSY/BATTERY	TK-RJM517799*002					1	1	1	1					X	
N	1-1	10605749	COVER ASSY/BATTERY	TK-RJM517799*003									1	1	1	1	X	
N	1-2	10594713	KNOB/ROTARY	RJM517433-001	1	1	1	1	1	1	1	1	1	1	1	1	C	
	S1	10220330	SCREW	S-BDB0-4X10B3NQ	19	19	19	19	19	19	19	19	19	19	19	19	X	

<Notes>
Price Code : Refer the latest “Parts Price Code” at “PARTS FINDER” on the Casio Service Website (https://www.servicecasio.com).
N : New parts
Q’ty : Quantity used per unit
R : Rank (A: Essential, B: Stock recommended, C: Others, X: No stock recommended)

EXPLODED VIEW

Upper Case

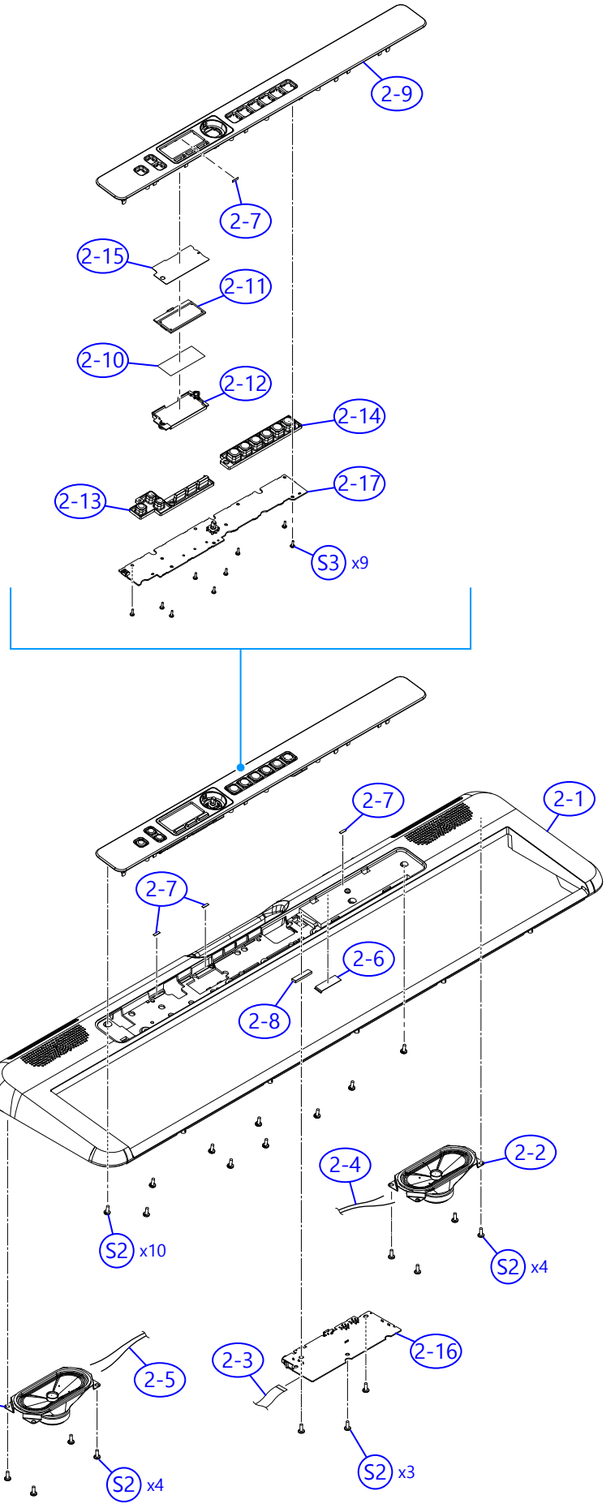

PARTS LIST

1: CT-S200BK_DI
2: CT-S200BK_EU
3: CT-S200BK_UK
4: CT-S200BK_US
5: CT-S200WE_DI
6: CT-S200WE_EU
7: CT-S200WE_UK
8: CT-S200WE_US
9: CT-S200RD_DI
10: CT-S200RD_EU
11: CT-S200RD_UK
12: CT-S200RD_US

N	Item	Code No.	Parts Name	Specification	Q'ty												R	Note
					1	2	3	4	5	6	7	8	9	10	11	12		
	Upper Case																	
N	2-1	10597858	CASE/UPPER	RJM517430-002	1	1	1	1									X	
N	2-1	10597859	CASE/UPPER	RJM517430-003					1	1	1	1					X	
N	2-1	10600596	CASE/UPPER	RJM517430-004									1	1	1	1	X	
N	2-2	10597857	SPEAKER	CJ0613FD01	2	2	2	2	2	2	2	2	2	2	2	2	X	
N	2-3	10597812	CABLE/FFC/CNA1	RJM517170-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	2-4	10597816	WIRE/SP/R	RJM517356-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	2-5	10597815	WIRE/SP/L	RJM517586-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
	2-6	10586095	SHEET/VZERO/C	RJM517354-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
	2-7	69235860	FABRIC TAPE/3X10	M440216-1	4	4	4	4	4	4	4	4	4	4	4	4	X	
	2-8	10216008	PACKING/7X30	RJM506423-001V01	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	2-9	10594712	PANEL/CONSOLE	RJM517432-001	1	1	1	1	1	1	1	1					X	
N	2-9	10598922	PANEL/CONSOLE	RJM517432-002									1	1	1	1	X	
N	2-10	10597811	D-TAPE/LCD	RJM517623-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	2-11	10597822	LCD	UNC-MSGF014542-02	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	2-12	10594715	HOLDER/LCD	RJM517435-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	2-13	10597854	RUBBER/KEY/A	RJM517472-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	2-14	10597855	RUBBER/KEY/B	RJM517473-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	2-15	10599909	PLATE/DISPLAY	RJM517741-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
	S2	10517163	SCREW	RJM514945-001	21	21	21	21	21	21	21	21	21	21	21	21	X	
	S3	10193631	SCREW	S-BDB0-2.6X8Z3NQ	9	9	9	9	9	9	9	9	9	9	9	9	X	
	MDA1 PCB																	
N	2-16	10602878	PCB UNIT/MAIN	TK-RJM517645*001	1	1	1	1	1	1	1	1	1	1	1	1	A	MDA1
N	CN10	10214342	CONNECTOR	B2B-EH(LF)(SN)	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	CN9	10270661	CONNECTOR	B2B-EH-K(LF)(SN)	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	CN7	10214343	CONNECTOR	B3B-EH(LF)(SN)	1	1	1	1	1	1	1	1	1	1	1	1	X	
	J1	10537493	JACK/DC	KM02007P	1	1	1	1	1	1	1	1	1	1	1	1	B	
	J2	10490438	JACK/PHONE/6.3	PJ-64043B-PBTV0	1	1	1	1	1	1	1	1	1	1	1	1	B	PEDAL
	J3,J4	10305131	JACK/PHONE/3.5	ST-3529B	2	2	2	2	2	2	2	2	2	2	2	2	B	AUDIO IN, PHONES
	CNA1 PCB																	
N	2-17	10602879	PCB UNIT/CNA1	TK-RJM517647*001	1	1	1	1	1	1	1	1	1	1	1	1	A	
	E1	10174536	ENCODER	EC12E24204A2	1	1	1	1	1	1	1	1	1	1	1	1	B	Dial

EXPLODED VIEW

Lower Case

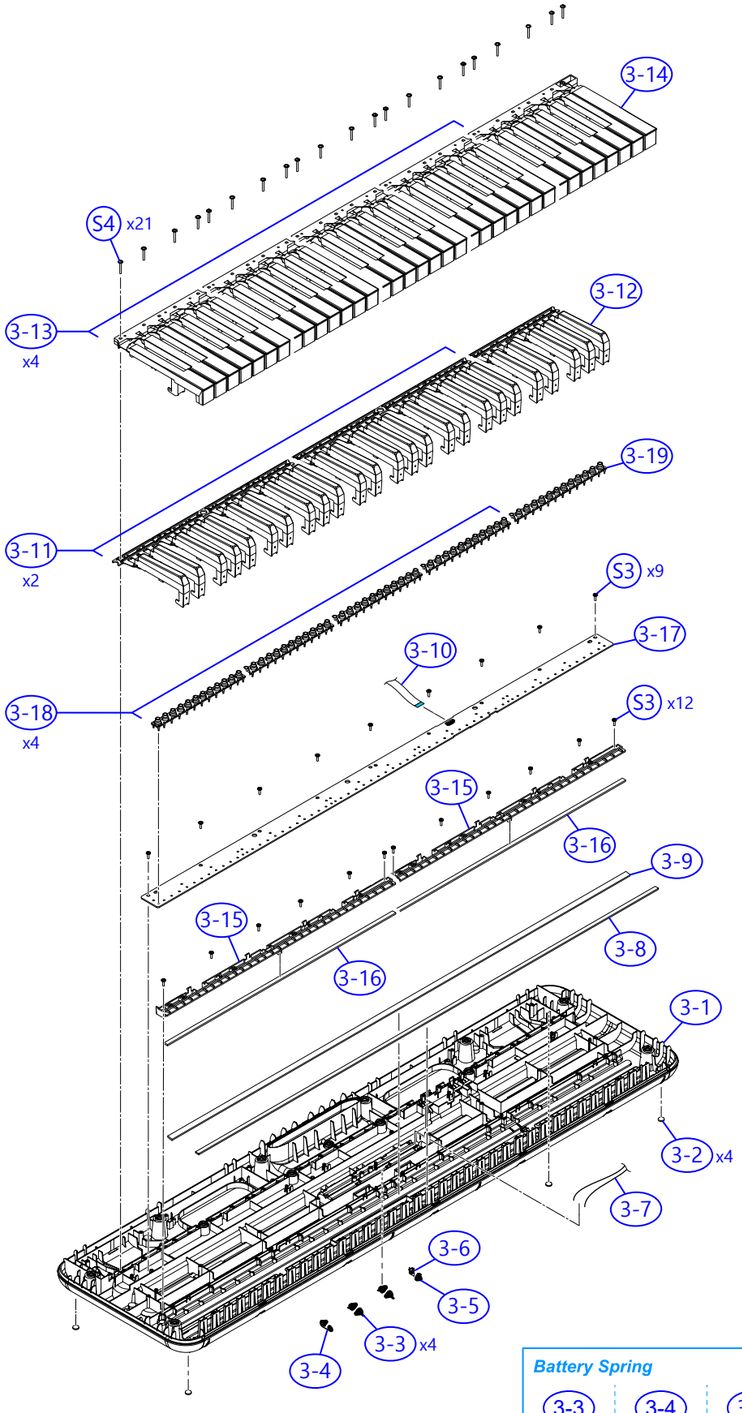

Battery Spring

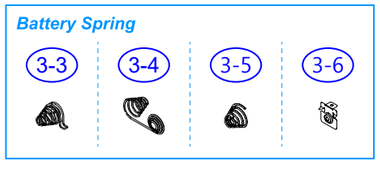

PARTS LIST

1: CT-S200BK_DI
2: CT-S200BK_EU
3: CT-S200BK_UK
4: CT-S200BK_US
5: CT-S200WE_DI
6: CT-S200WE_EU
7: CT-S200WE_UK
8: CT-S200WE_US
9: CT-S200RD_DI
10: CT-S200RD_EU
11: CT-S200RD_UK
12: CT-S200RD_US

N	Item	Code No.	Parts Name	Specification	Q'ty												R	Note
					1	2	3	4	5	6	7	8	9	10	11	12		
	Lower Case																	
N	3-1	10594711	CASE/LOWER	RJM517431-001	1	1	1	1									X	
N	3-1	10597820	CASE/LOWER	RJM517431-002					1	1	1	1					X	
N	3-1	10597821	CASE/LOWER	RJM517431-003									1	1	1	1	X	
	3-2	10555159	RUBBER/FOOT	RJM515614-006	4	4	4	4	4	4	4	4	4	4	4	4	X	
	3-3	10352033	TERMINAL/BT/C	RJA521670-001	4	4	4	4	4	4	4	4	4	4	4	4	X	
	3-4	69271070	TERMINAL/BT/POS-NEG	M440677-1	1	1	1	1	1	1	1	1	1	1	1	1	X	
	3-5	10380432	TERMINAL/BT/NEG	M440002-1	1	1	1	1	1	1	1	1	1	1	1	1	X	
	3-6	10400576	TERMINAL/BT/POS	RJM511046-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	3-7	10597814	WIRE/BATTERY	RJM517360-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
	3-8	10513862	DAMPER/KEY	RJM509138-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	3-9	10601705	FELT/LOWER	RJM517789-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	3-10	10597813	CABLE/FFC/KYC1	RJM517348-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
N	3-11	10595843	BLACK KEY/10P	RJM517525-001	2	2	2	2	2	2	2	2	2	2	2	2	C	
N	3-12	10597784	BLACK KEY/5P	RJM517525-002	1	1	1	1	1	1	1	1	1	1	1	1	C	
N	3-13	10597861	WHITE KEY/CB	RJM517526*001	4	4	4	4	4	4	4	4	4	4	4	4	C	
N	3-14	10597862	WHITE KEY/CS	RJM517527*001	1	1	1	1	1	1	1	1	1	1	1	1	C	
N	3-15	10594714	PLATE/FELT/UPPER	RJM517434-001	2	2	2	2	2	2	2	2	2	2	2	2	X	
N	3-16	10601429	FELT/UPPER	RJM517622-001	2	2	2	2	2	2	2	2	2	2	2	2	X	
N	3-17	10602877	PCB UNIT/KYC1	TK-RJM517542*001	1	1	1	1	1	1	1	1	1	1	1	1	A	
	3-18	10163902	RUBBER/KEY/CB	RJM503854-001	4	4	4	4	4	4	4	4	4	4	4	4	X	
	3-19	10163903	RUBBER/KEY/CS	RJM503855-001	1	1	1	1	1	1	1	1	1	1	1	1	X	
	S3	10193631	SCREW	S-BDB0-2.6X8Z3NQ	21	21	21	21	21	21	21	21	21	21	21	21	X	
N	S4	10193632	SCREW	S-WLB0-2.6X18Z3NQ	21	21	21	21	21	21	21	21	21	21	21	21	X	
	Accessory																	
N	X-1	10594716	STAND/MUSIC	RJM517436-001	1	1	1	1					1	1	1	1	C	
N	X-1	10597832	STAND/MUSIC	RJM517436-002					1	1	1	1					C	
N	X-2	10597149	AC ADAPTOR	AD-E95100LU-P4				1				1				1	B	
N	X-2	10597150	AC ADAPTOR	AD-E95100LG-P6		1				1				1			B	